


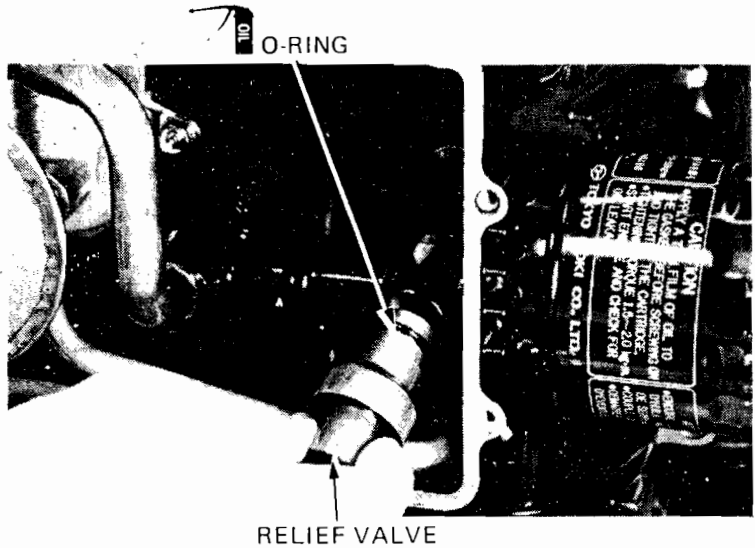


Replace the O-ring on the relief valve with a new one.
Apply oil to the O-ring and install the relief valve.



OIL STRAINER CLEANING

Remove and clean the oil strainer.

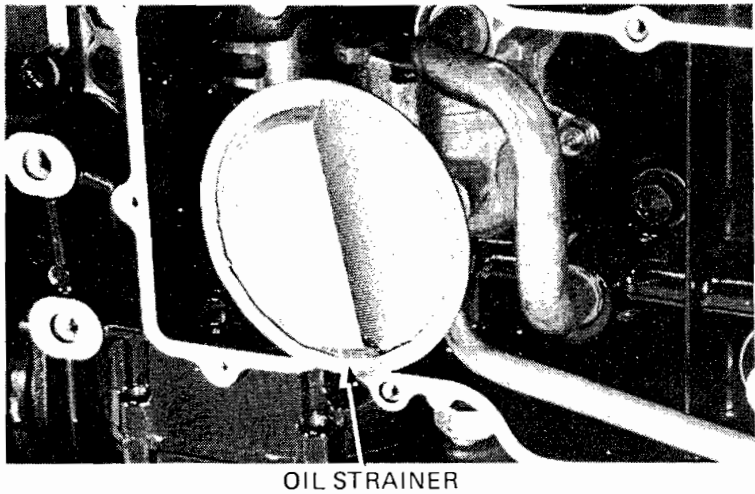

Replace the O-ring on the oil pump with a new one.
Apply engine oil to the O-ring and install the oil strainer aligning its groove with the tab on the oil pump.

