



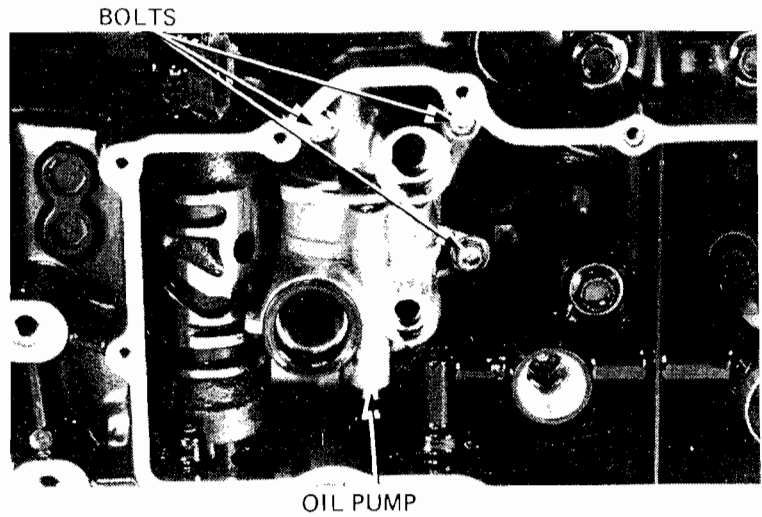

Remove the three oil pump mounting bolts and the oil pump.

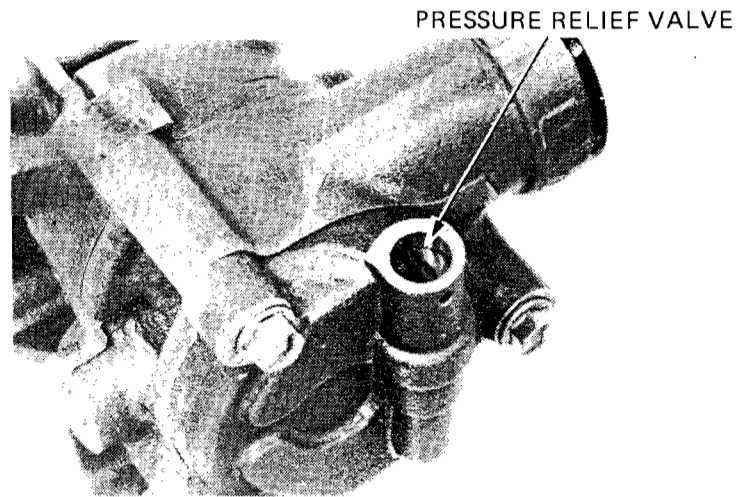

Check the operation of the pressure relief valve.



DISASSEMBLY

Remove the three bolts and oil pump cover B.

