


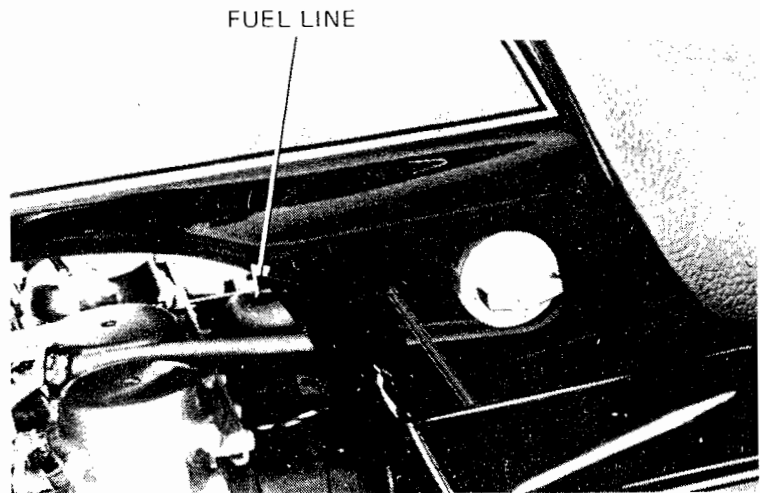

FUEL LINES

Remove the fuel valve cover.
Check the fuel lines for deterioration, damage, or leakage.

Replace if necessary.



FUEL STRAINER

Turn the fuel valve OFF and remove the fuel tank (Page 4-16).

Remove the fuel cup and empty the gasoline into a suitable container. Remove the O-ring and strainer.

WARNING

Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.

Wash the cup and filter screen in clean nonflammable or high flash point solvent.

Reinstall the screen, aligning the index marks on the fuel valve body and filter screen. Install a new O-ring into the fuel valve body. Reinstall the fuel cup, making sure the new O-ring is in place. Hand tighten the fuel cup and torque to specification.

TORQUE: 3–5 N·m
(0.3–0.5 kg·m, 2–4 ft·lb)

After installing and refilling the tank, turn the fuel valve ON and check that there are no leaks.

