


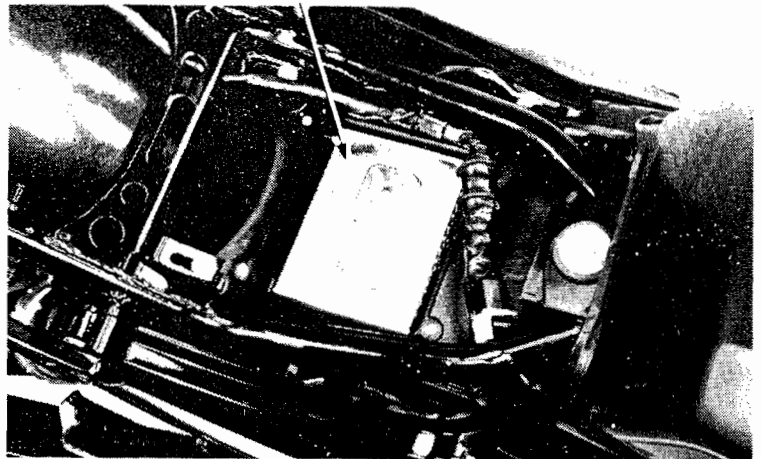

Remove and discard the air cleaner element.
Install a new element, the air cleaner cover and seat.

ELEMENT




CRANKCASE BREATHER

Remove the plug from the drain tube to empty any deposits.

Install the drain plug.

NOTE

Service more frequently when riding in rain or at full throttle, or if the deposit level can be seen in the transparent section of the drain tube.

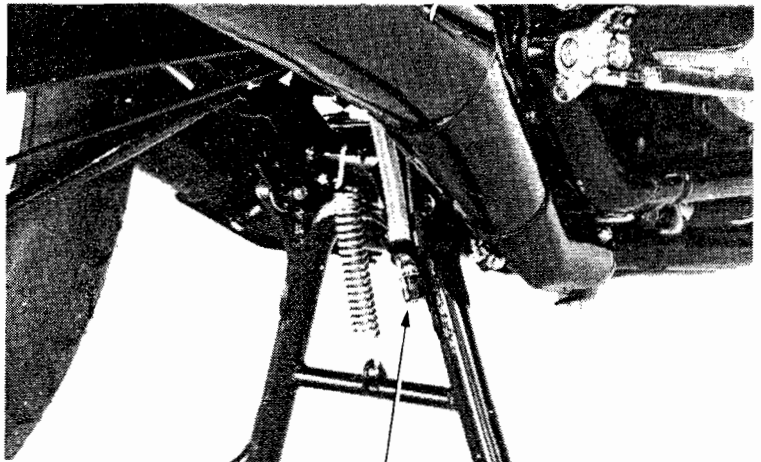

DRAIN PLUG

SPARK PLUGS

RECOMMENDED SPARK PLUGS

	NGK	ND
Standard	DPR8EA-9	X24EPR-U9
For cold climate (Below 5°C, 41°F)	DPR7EA-9	X22EPR-U9
For extended high speed riding	DPR9EA-9	X27EPR-U9

Disconnect the spark plug caps and clean any dirt from around the spark plug bases.

Remove and discard the spark plugs.

Measure the new spark plug gaps using a wire-type feeler gauge.

SPARK PLUG GAP: 0.8–0.9 mm (0.031–0.035 in)

Adjust the spark plug gap by bending the side electrode carefully.

With the plug washer attached, thread each spark plug in by hand to prevent cross-threading. Tighten the spark plugs another 1/2 turn with a spark plug wrench to compress the plug washer. Connect the spark plug caps.

SIDE ELECTRODE

0.8–0.9 mm
(0.031–0.035 in)

CENTER ELECTRODE

