




If adjustment is necessary, turn the rear brake adjusting nut.

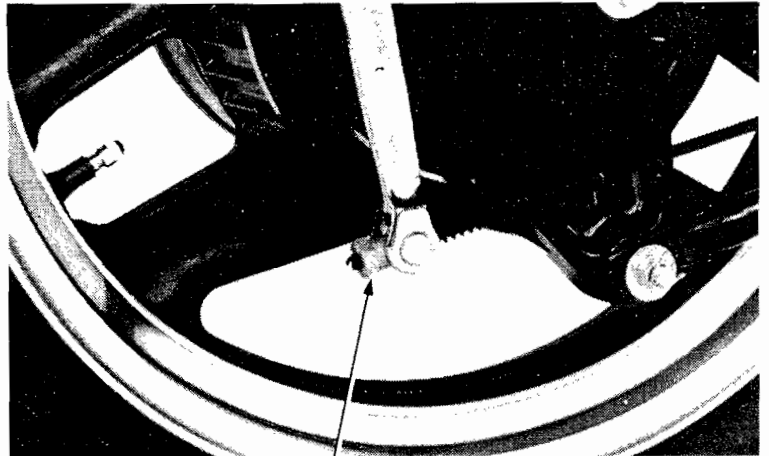


BRAKE ADJUSTING NUT

BRAKE LIGHT SWITCH

NOTE

- Perform rear brake light switch adjustment after adjusting the brake pedal free play and height.
- The front brake light switch does not require adjustment.

Adjust the brake light switch so that the brake light will come on when the brake pedal is depressed 20 mm (3/4 in), and brake engagement begins. Holding the switch body and turning the adjusting nut. Do not turn the switch body.

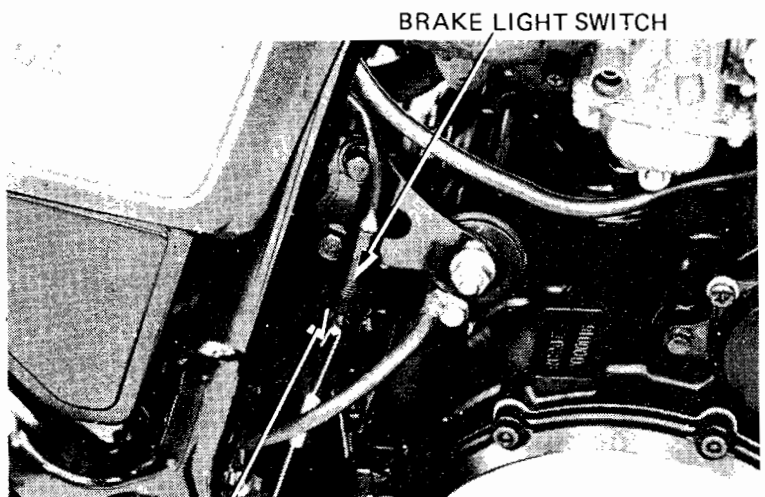

BRAKE LIGHT SWITCH

ADJUSTING NUT

HEADLIGHT AIM

Remove the two headlight cover nuts and open the headlight cover.
Adjust vertically by turning the vertical adjusting screw.
Adjust horizontally by turning the horizontal adjusting screws.


NOTE

Adjust the headlight beam as specified by local laws and regulations.

WARNING

An improperly adjusted headlight may blind oncoming drivers, or it may fail to light the road for a safe distance.

HORIZONTAL ADJUSTING SCREWS

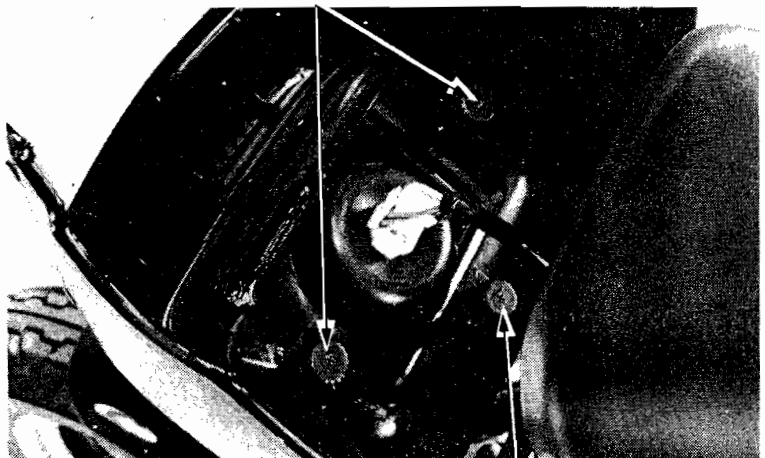

VERTICAL ADJUSTING SCREW