




Check the front fork air pressure when the forks are cold.

Place the vehicle on its center stand.

Remove each air valve cap and measure the air pressure.

AIR PRESSURE:

0-6 psi (0-40 kPa, 0-0.4 kg/cm²)

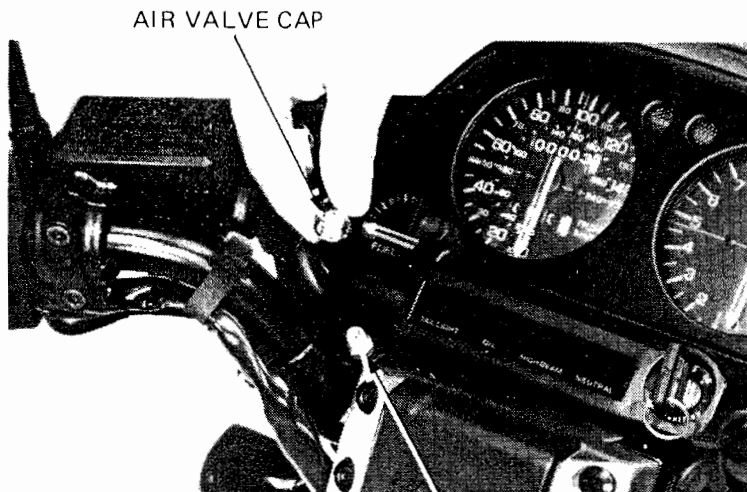

AIR VALVE CAP


AIR VALVE

ANTI-DIVE SYSTEM INSPECTION

Check the operation of the anti-dive system in all positions by riding the motorcycle and firmly applying the brakes.

Position	Anti-dive damper force
1	LIGHT ANTI-DIVE
2	MEDIUM
3	HARD
4	MAXIMUM ANTI-DIVE

Inspect and if necessary, repair the system (Refer to section 14).

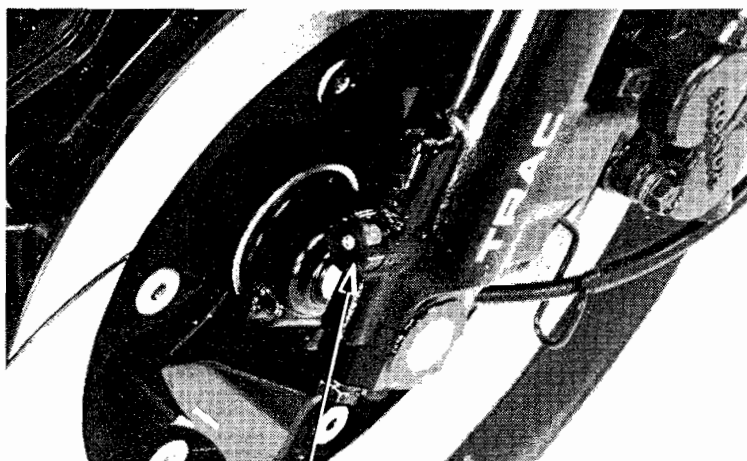

ADJUSTER

REAR

Place the motorcycle on its center stand.

Move the rear wheel sideways with force to see if the swing arm bearings are worn. Replace if excessively worn.

Check the shock absorbers for leaks or damage.

Tighten all rear suspension nuts and bolts.

