




CARBURETOR REMOVAL

Remove the seat, both frame side covers and fuel tank (Page 4-16).
Loosen the air cleaner connecting tube and carburetor intake pipe bands.

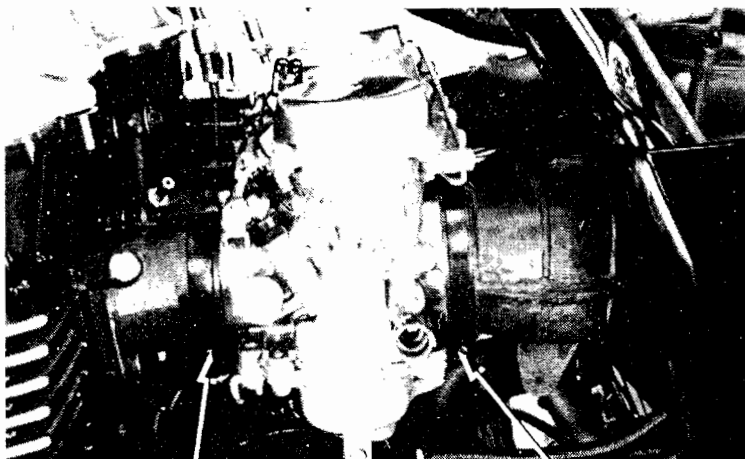


INTAKE PIPE BAND

CONNECTING TUBE BAND

Disconnect the couplers and remove the regulator/rectifier and tool box by removing the bolts.

Remove the left air cleaner case mounting bolt.

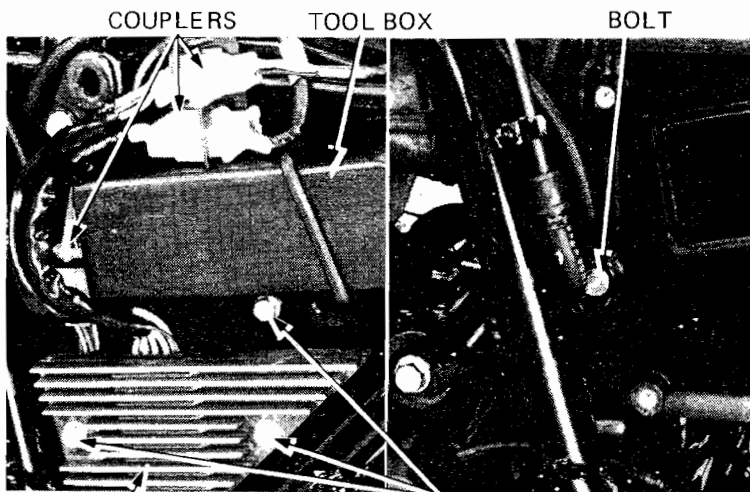

COUPLERS


TOOL BOX

BOLT

REGULATOR/RECTIFIER

BOLTS

Remove the front and lower battery holder bolts. Loosen the air cleaner case upper mounting bolts and move the air cleaner case to the rear.

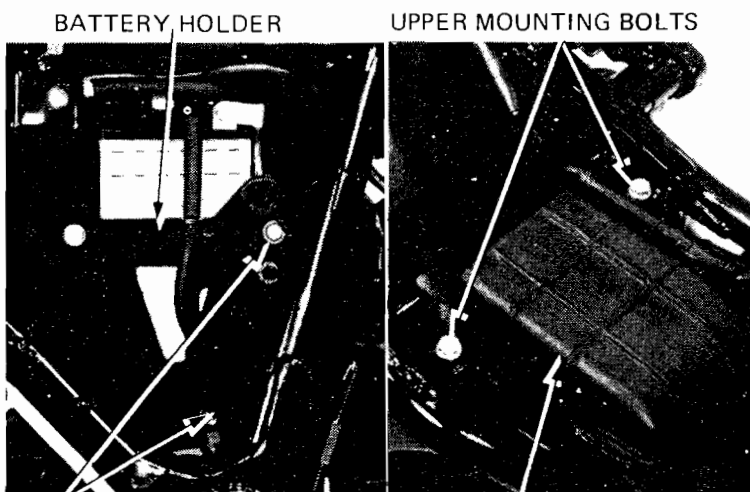

BATTERY HOLDER

UPPER MOUNTING BOLTS

BOLTS

AIR CLEANER CASE