





Push the needle holder in and turn it 60 degrees with an 8 mm socket. Then remove the needle holder, spring and needle from the piston.

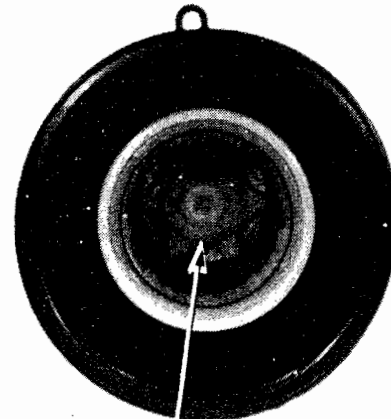

NEEDLE HOLDER

Inspect the needle for excessive wear at the tip and for bending, or other damage.

Check the diaphragm for deterioration and tears.

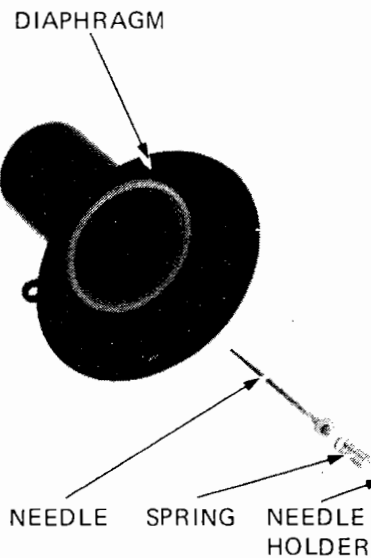

### INSTALLATION

Installation is essentially the reverse of removal. Install the chamber cover so that its cavity aligns with the hole in the diaphragm.

