




## FLOAT CHAMBER

### REMOVAL

Remove the four float chamber screws and the float chamber.

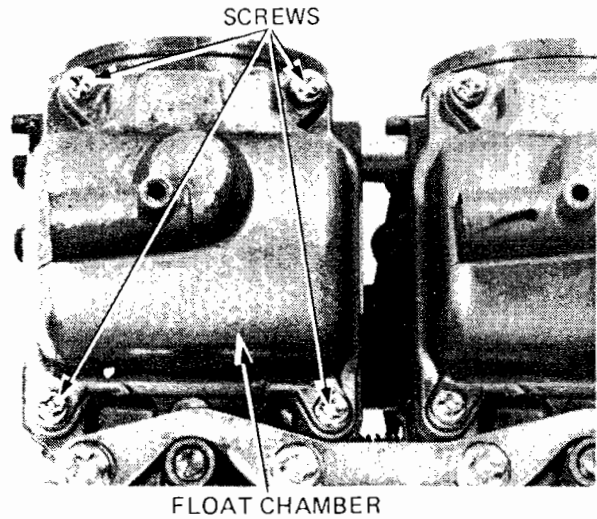


### FLOAT LEVEL

Measure the float level with the float tang just contacting the float valve.

**SPECIFICATIONS: 18.5 mm (0.61 in)**

Replace the float assembly, if it is not within specifications.

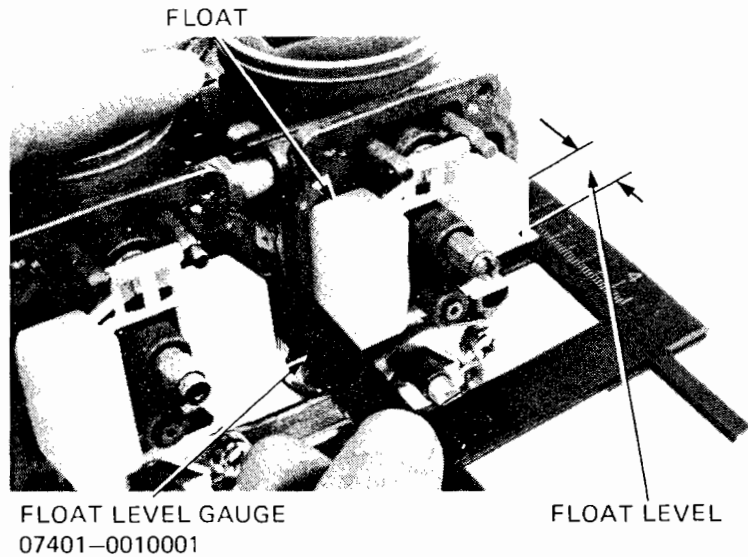

### FLOAT AND JETS

Remove the float pin, float and float valve.

