


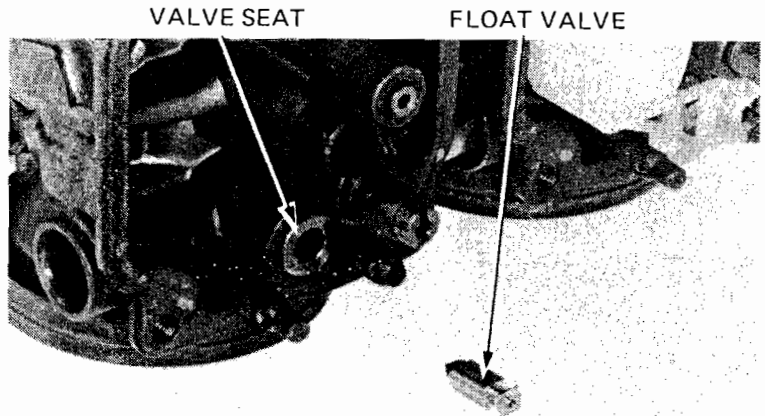

Inspect the float valve for grooves and nicks.


Inspect the operation of the float valve.



Remove the main jet, needle jet holder and slow jet.

#### ASSEMBLY

Assemble the float chamber components in the reverse order of disassembly.

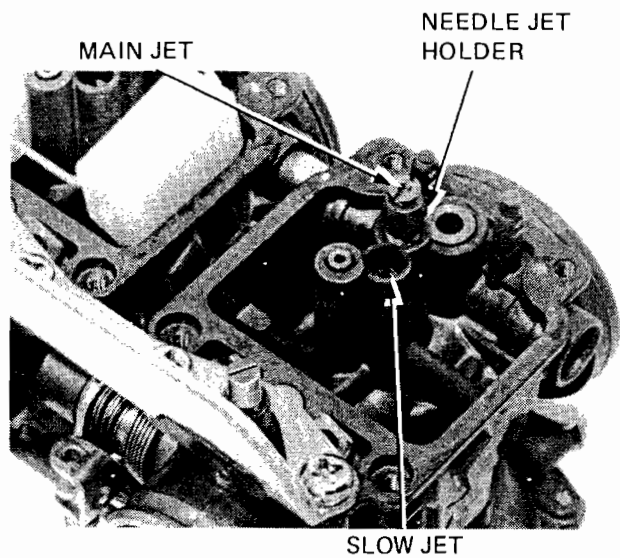

### CHOKE (BYSTARTER) VALVE

#### REMOVAL

Unhook the choke (bystarter) relief spring.

