



Loosen each choke (bystarter) arm locking screw.

Pull the choke shaft out and remove the choke arms.

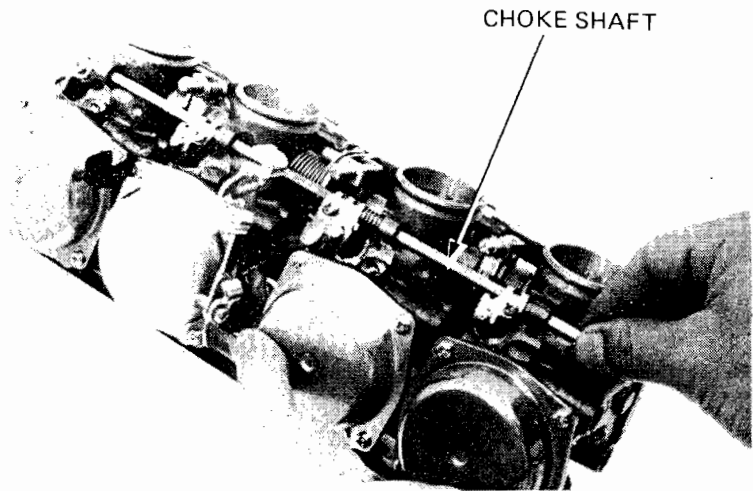

Loosen the choke (bystarter) valve nut and remove the valve assembly.

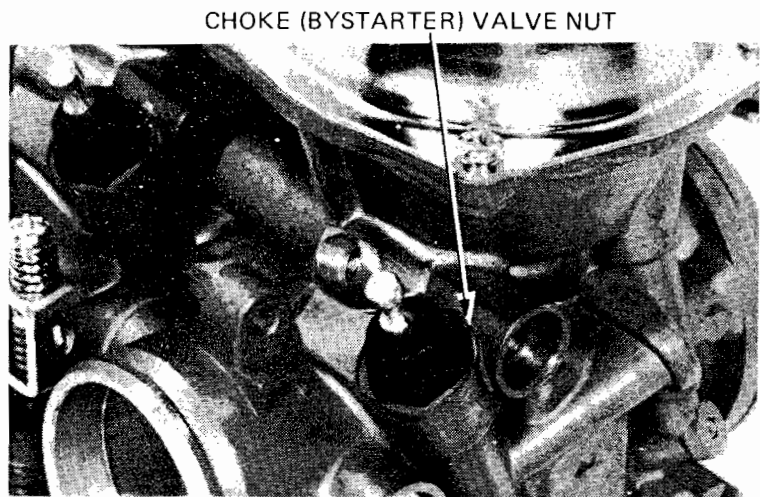

Check the choke (bystarter) valve and spring for nicks, grooves, or other damage.

