




INSTALLATION


Install the choke (bystarter) valve and linkage in the reverse order of removal.
Make sure that the choke (bystarter) linkage operates smoothly by moving the choke lever.

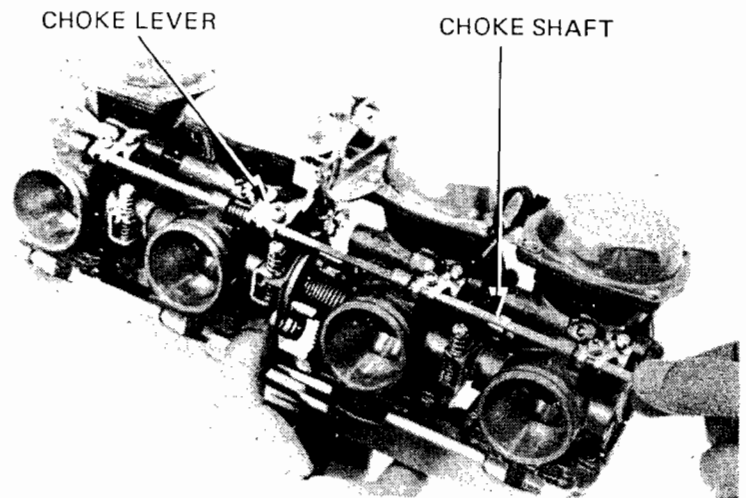

CARBURETOR SEPARATION

Remove the choke (bystarter) shaft and arms (Page 4-7).

Loosen each carburetor's synchronization adjusting screw until there is no spring tension on it.

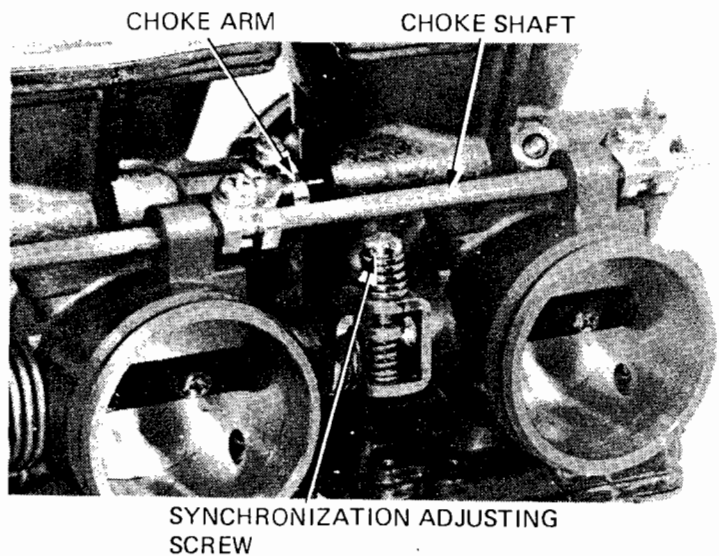

Remove the rear bracket.

