




Remove the front bracket.

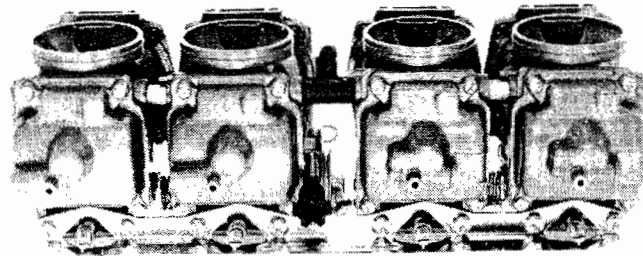


FRONT BRACKET

Carefully separate the carburetors.

**CAUTION**

*Separate the carburetors horizontally to prevent damage to the fuel and air joint pipes and to the choke linkage.*

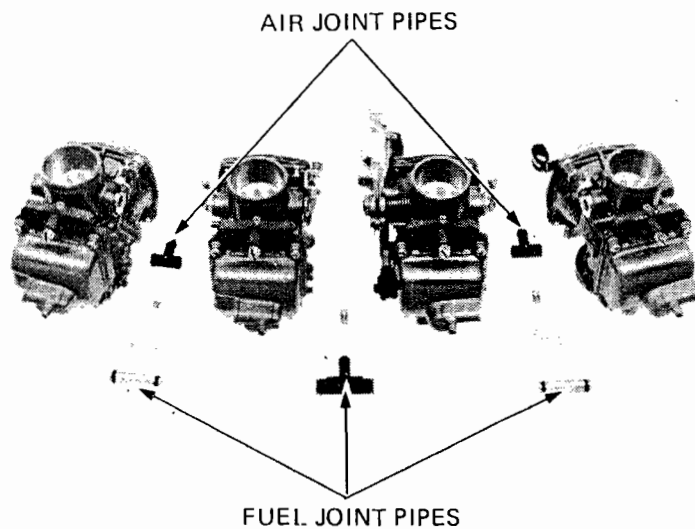

**CARBURETOR CLEANING**

- Remove the vacuum piston (Page 4-4).
- Remove the float chamber, float, valve and jets (Page 4-6).
- Remove the choke (bystarter) valve (Page 4-7).
- Clean all carburetor passages with compressed air.