




Make the distance between the by-pass hole in the carburetor body and throttle valve equal for each carburetor by turning the synchronization adjusting screws.


SYNCHRONIZATION ADJUSTING SCREW

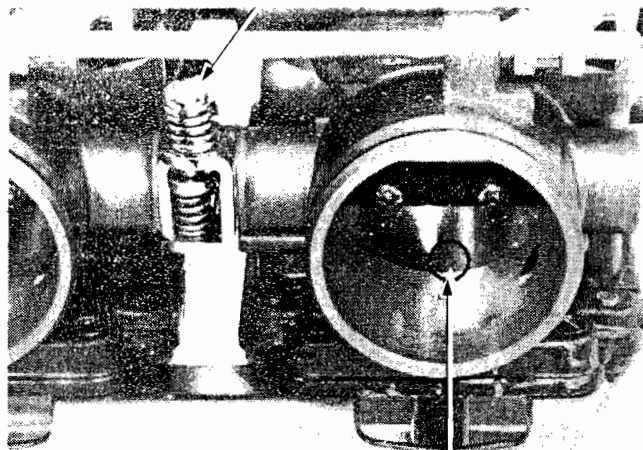

BY-PASS HOLE

Inspect the throttle operation as described below:

- Open the throttle slightly by pressing on the throttle linkage. Then release the throttle.
- Make sure that it returns smoothly.
- Make sure that there is no drag when opening and closing the throttle.

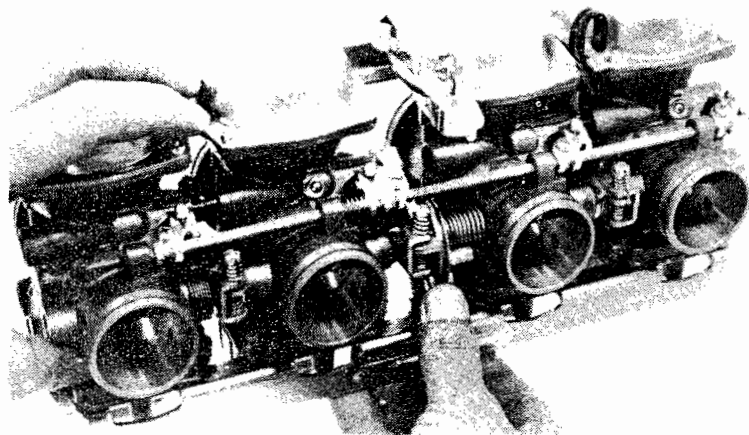

## CARBURETOR INSTALLATION

The installation sequence is the reverse of removal.

After installation, inspect the following items.

- Choke cable adjustment (Page 3-6).
- Throttle cable adjustment (Page 3-5).
- Carburetor synchronization adjustment (Page 3-8).
- Carburetor idle speed (Page 3-9).

