




Remove the diaphragm base and remove the diaphragms.


DIAPHRAGM BASE

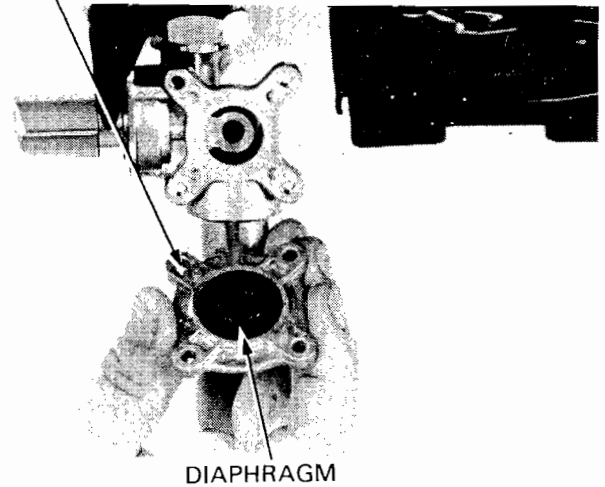

DIAPHRAGM

Install new diaphragms onto the base.  
Install the diaphragm base with its boss facing down.  
Install the diaphragm cover.  
Test the diaphragm operation (Page 4-16).

DIAPHRAGM BASE

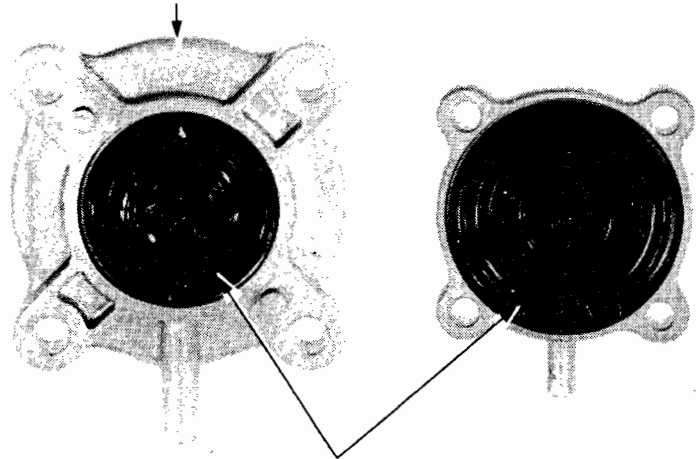

DIAPHRAGMS

### FUEL STRAINER CLEANING


Drain the fuel from the fuel tank.  
Loosen the fuel valve lock nut and remove the fuel valve.  
Remove the fuel strainer and O-ring.  
Clean the fuel strainer.  
Install the fuel strainer and O-ring onto the fuel valve.  
Install the fuel valve and tighten the lock nut.

#### NOTE


Do not over-tighten the lock nut.

Fill the fuel tank with gasoline and make sure there are no fuel leaks.

LOCK NUT

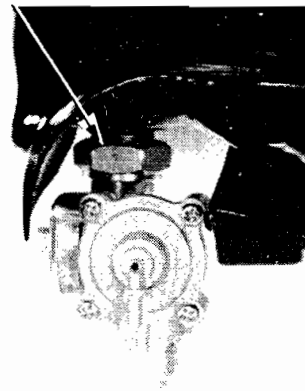

FUEL STRAINER

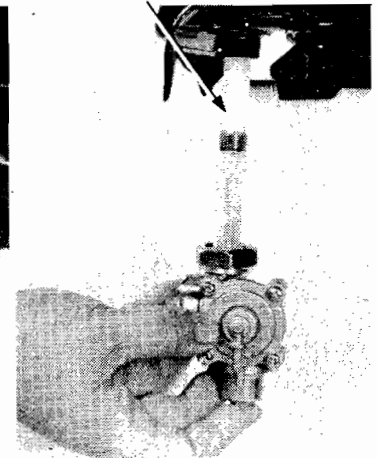

FUEL VALVE