



SERVICE INFORMATION	5-1
ENGINE REMOVAL	5-2
ENGINE INSTALLATION	5-5

## GENERAL

- A floor jack or other adjustable support is required to support and maneuver the engine.
- The following parts or components can be serviced with the engine installed in the frame:

- |                 |                 |
|-----------------|-----------------|
| • Clutch        | • Starter motor |
| • Shift linkage | • Cylinder head |
| • Camshaft      | • Alternator    |
| • Carburetor    | • Piston        |
| • Cylinder      |                 |

**5**

## SPECIFICATIONS

Engine dry weight	82 kg (181 lb)
Oil capacity	2.8 liter (3.0 US qt, 2.5 Imp qt) after oil filter and oil change 2.5 liter (2.6 US qt, 2.2 Imp qt) after oil change 3.6 liter (3.8 US qt, 3.2 Imp qt) after disassembly

## TORQUE VALUES

Engine mount	8 mm bolt	20-30 N·m (2.0-3.0 kg-m, 14-22 ft-lb)
	10 mm bolt	45-60 N·m (4.5-6.0 kg-m, 33-43 ft-lb)
Footpeg socket bolt		30-40 N·m (3.0-4.0 kg-m, 22-29 ft-lb)
Brake pedal bolt		20-28 N·m (2.0-2.8 kg-m, 14-20 ft-lb)