



**ENGINE REMOVAL/INSTALLATION**

**ENGINE REMOVAL**

Place the motorcycle on its center stand.

Drain the engine oil (Page 2-3).

Remove the following components:


- seat and both frame side covers.
- fuel tank (Page 4-16).
- ignition coils (Page 19-2).
- carburetors (Page 4-3).
- exhaust pipes (Page 17-2).

Remove the bolt attaching the battery ground cable to the engine.

Disconnect the starter cable from the starter motor by removing the terminal nut.

Disconnect the crankcase breather tube from the crankcase.

CRANKCASE BREATHER TUBE

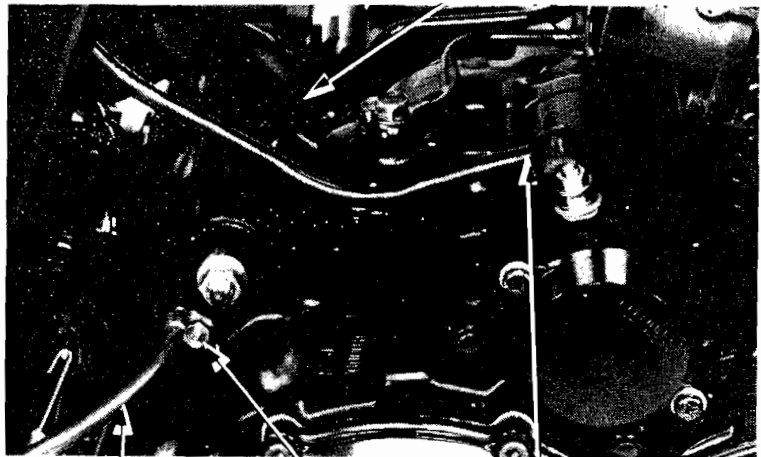

GROUND CABLE


BOLT

STARTER CABLE

Remove the brake pedal.  
Remove the right footpeg.

RIGHT FOOTPEG

BRAKE PEDAL

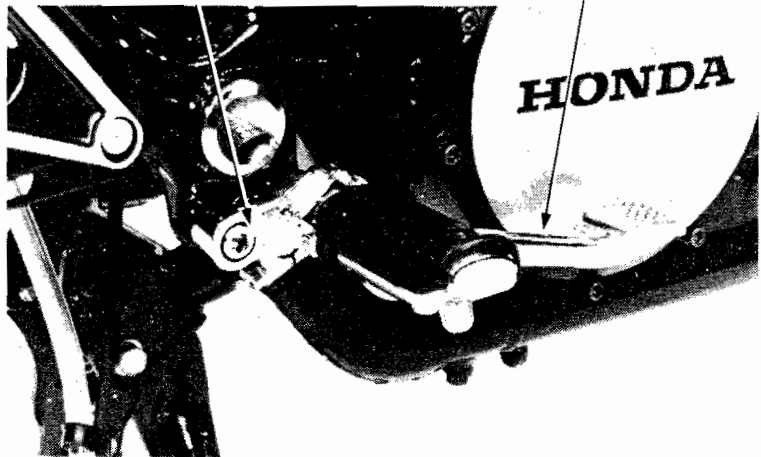


Remove the right and left oil hoses by removing the bolts.

Remove the oil filter (Page 2-3).

RIGHT OIL HOSE

OIL FILTER

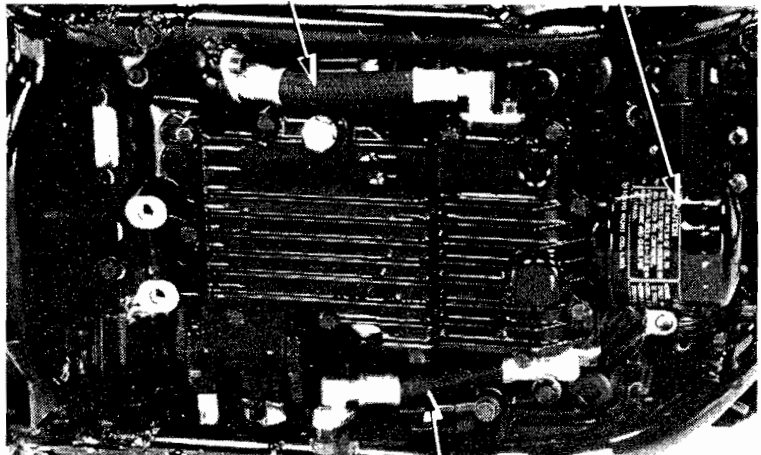

LEFT OIL HOSE