


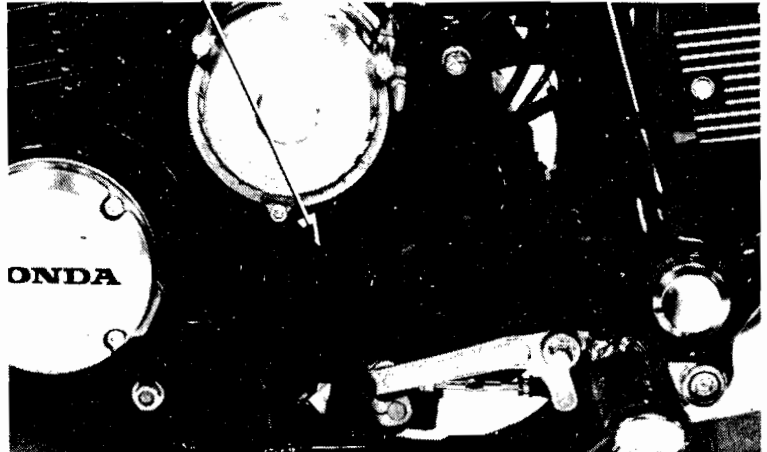


Remove the left crankcase rear cover.

LEFT CRANKCASE REAR COVER



Remove the gearshift pedal and left footpeg assembly by removing the 10 mm socket bolt and 6 mm shift arm pinch bolt.

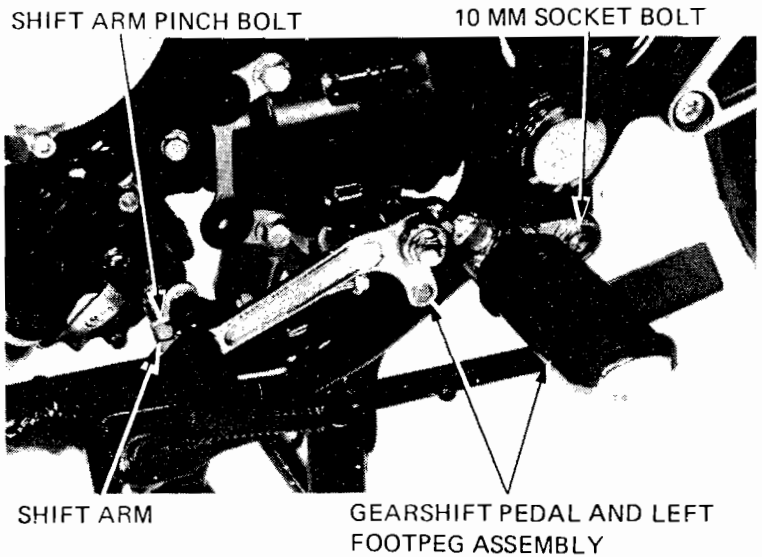

Remove the slave cylinder from the crankcase with the clutch pipe connected (Page 8-7).

NOTE

Do not operate the clutch lever after removing the clutch slave cylinder. To do so will cause difficulty in installing the slave cylinder.

SLAVE CYLINDER

