




Disconnect the pulse generator, alternator, and oil pressure switch/gear position switch wire couplers.


PULSE GENERATOR WIRE COUPLER      GEAR POSITION SWITCH WIRE COUPLER

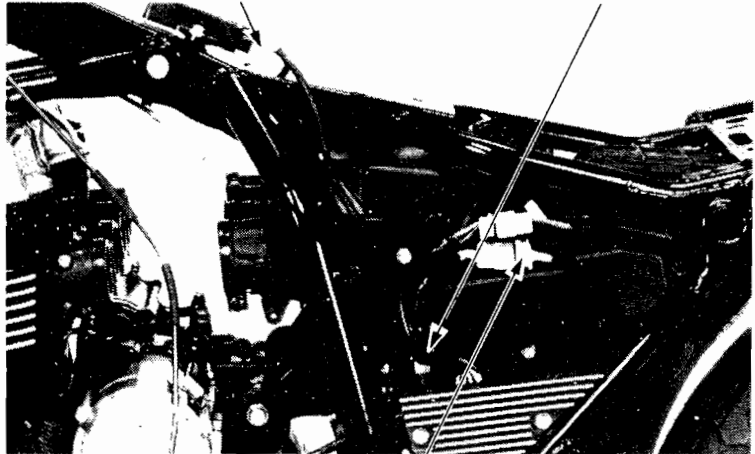

ALTERNATOR WIRE COUPLER

Remove the sub frame bolts and the sub frames.


SUB FRAMES      8 mm BOLTS

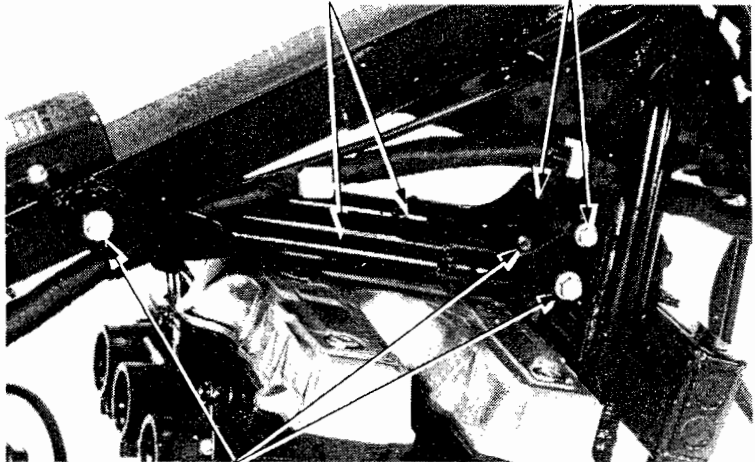

10 mm BOLTS

Pry the universal joint to the rear and hold it with a screwdriver through the hole in the left swing arm pivot bolt as shown.

UNIVERSAL JOINT      LEFT SWING ARM PIVOT BOLT

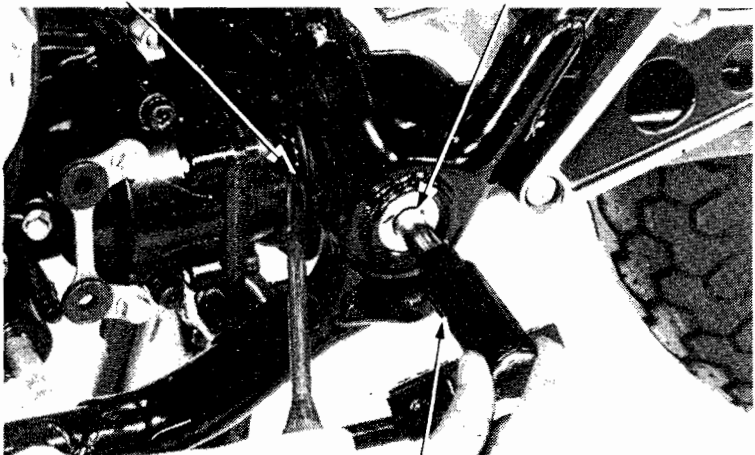

SCREWDRIVER