





CAMSHAFT REMOVAL

Remove the following components:

- seat and fuel tank (Page 4-16).
- ignition coils (Page 18-3).
- air guide.
- sub frames (Page 5-4).

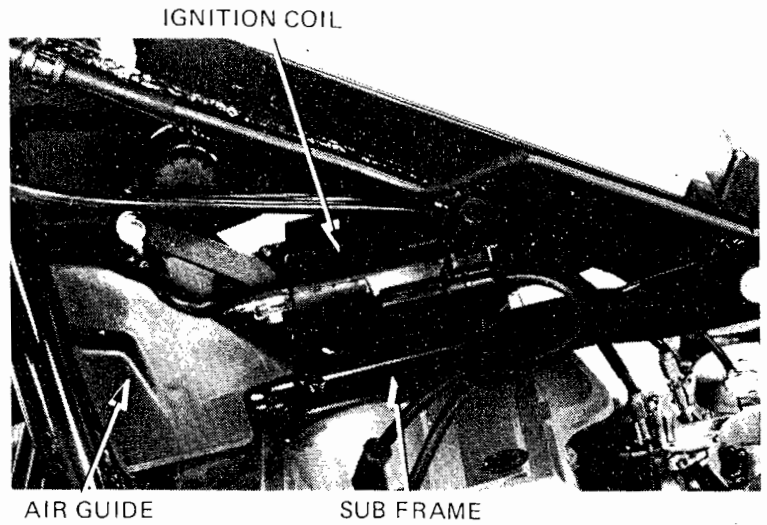

Remove the cylinder head cover bolts and the cover. Remove the dowel pins.

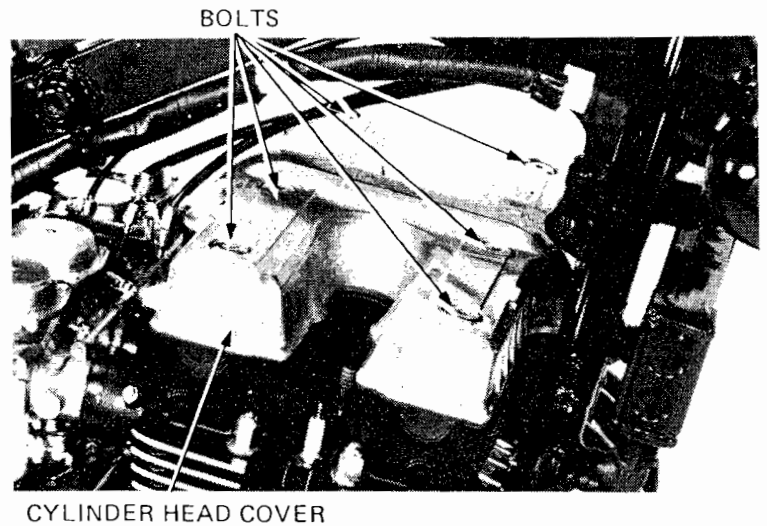

Check the cylinder head cover seal for deterioration or damage and replace if necessary.

