





CYLINDER HEAD/VALVES

- Remove the four bolts attaching the cam chain guard and the guard.
- Remove the oil pipe bolts and oil pipes.
- Remove the socket bolts attaching the defoaming chamber covers and the covers.

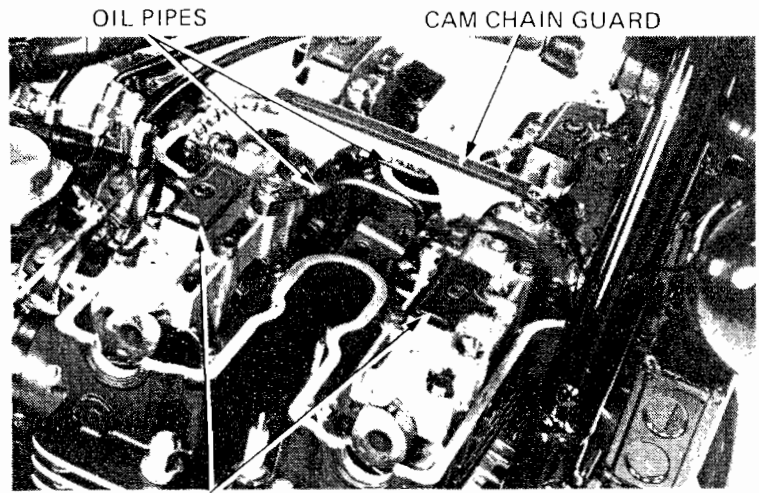

DEFOAMING CHAMBER COVERS

- Remove the cam sprocket bolts.

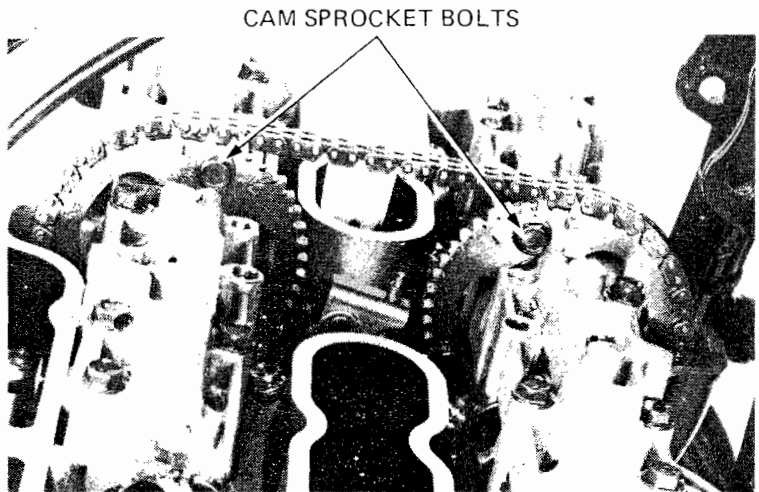

- Remove the right crankshaft cover.
- Turn the crankshaft counterclockwise and then remove the two other cam sprocket bolts.

