




HYDRAULIC TAPPET REMOVAL

Remove the camshafts (Page 6-3).
Remove the rocker arm holder bolts, holders and rocker arms.
Remove the dowel pins.

ROCKER ARM HOLDERS

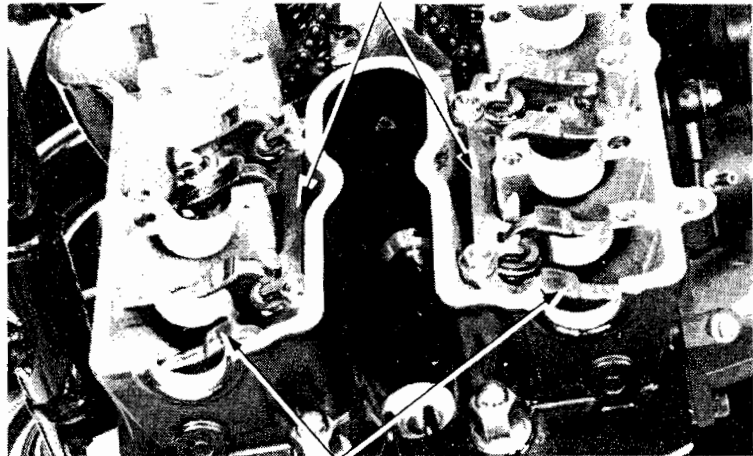


ROCKER ARMS

Remove the hydraulic tappets.

NOTE

Take care not to damage the pivot sphere end of the hydraulic tappet.

HYDRAULIC TAPPETS

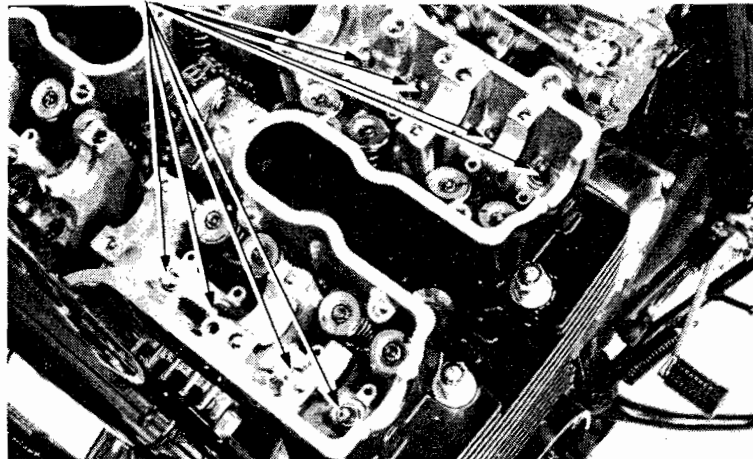

INSPECTION ROCKER ARM

Inspect the rocker arm followers for damage or abnormal wear, and replace if necessary.

HYDRAULIC TAPPET

Inspect the hydraulic tappet for wear or damage or for a clogged oil hole.

CAUTION

Never attempt to disassemble the tappets. Always use the special tool when bleeding the tappets. Use of wire can cause damage to them.

