




Remove the 12 cylinder head cap nuts and washers.

**NOTE**


Loosen the nuts in 2-3 steps in a crisscross pattern to prevent cylinder head warpage.

Remove the cylinder head.

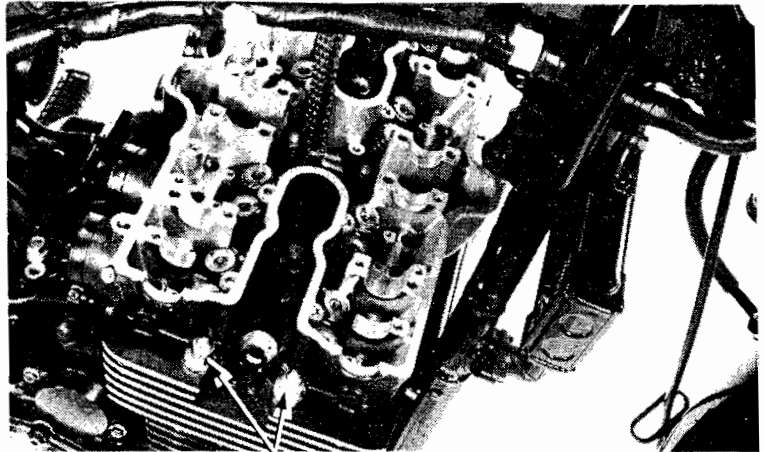

CAP NUTS

Remove the cylinder head gasket and dowel pins.  
Remove the cam chain guide.

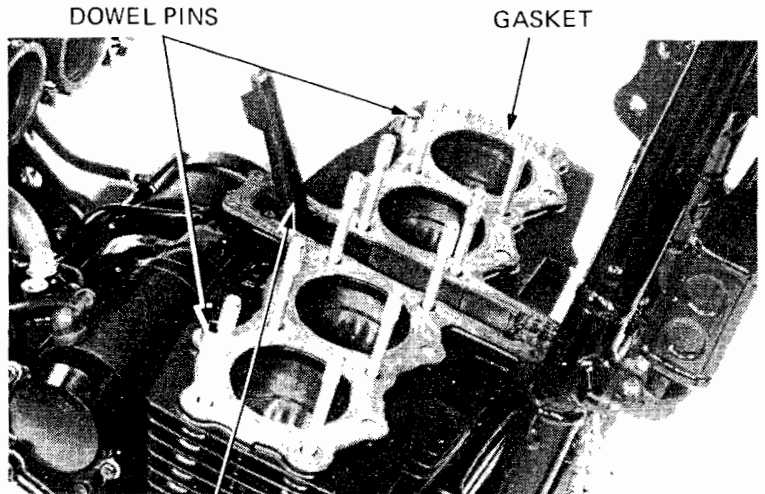

DOWEL PINS

GASKET

CAM CHAIN GUIDE

**CAM CHAIN GUIDE AND TENSIONER INSPECTION**

Inspect the cam chain guide and tensioner for damage or excessive wear.

Inspect the cam chain tensioner slipper for damage or excessive wear.

Replace the spring if it is weak or has been damaged.

