





CYLINDER HEAD/VALVES

Install the cylinder head cover and tighten the cover bolts.

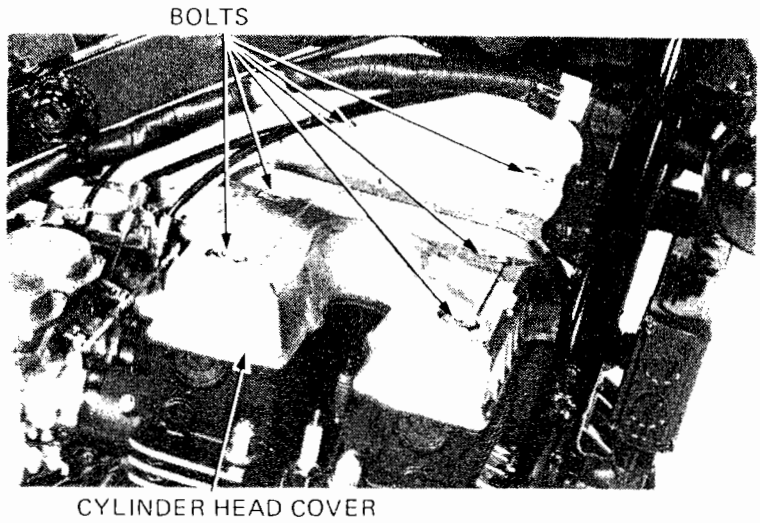

Install the sub frames and tighten the bolts.

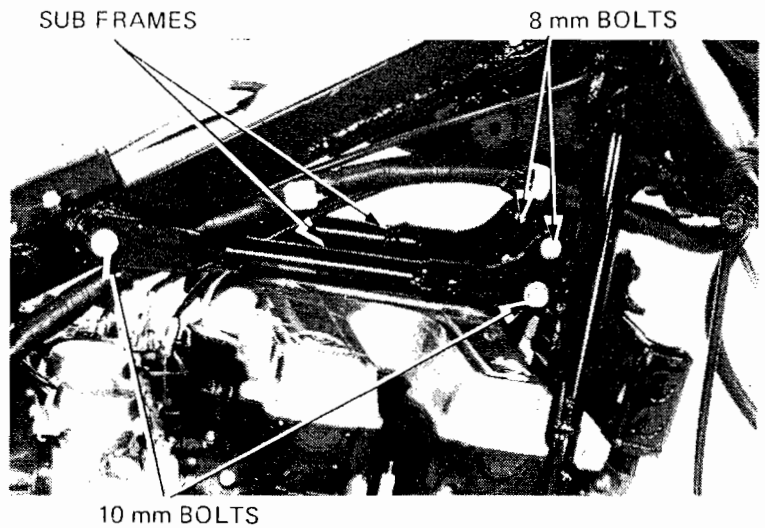

Install the air guide and ignition coils (Page 19-3).

Install the fuel tank and seat.

