




## CYLINDER REMOVAL

Remove the cylinder head (Section 6)

Remove the cam chain tensioner guide.


Remove the front and rear cylinder holding nuts and remove the cylinder.

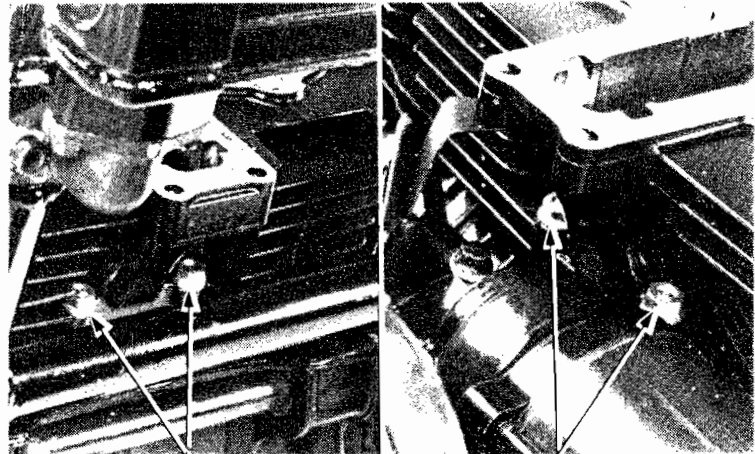

FRONT HOLDING NUTS

REAR HOLDING NUT

Remove the cylinder gasket and dowel pins.

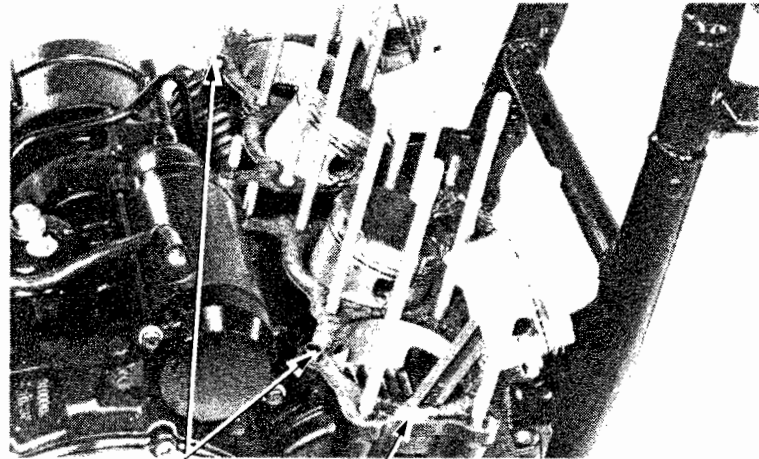

DOWEL PINS

GASKET

Remove gasket material from the cylinder surfaces.

### NOTE

- Avoid damaging the cylinder surfaces.
- Gaskets will come off easier if soaked in solvent.

