



**CLUTCH**

---

**TROUBLESHOOTING**

**Clutch lever soft or spongy**

1. Air bubbles in hydraulic system
2. Low fluid level
3. Hydraulic system leaking

**Clutch lever too hard**

1. Sticking piston(s)
2. Clogged hydraulic system

**Clutch slips**

1. Hydraulic system sticking
2. Discs worn
3. Springs weak

**Clutch will not disengage**

1. Air bubbles in hydraulic system
2. Low fluid level
3. Hydraulic system leaking
4. Hydraulic system sticking
5. Plates warped

**Motorcycle creeps with clutch disengaged**

1. Air bubbles in hydraulic system
2. Low fluid level
3. Hydraulic system leaking
4. Hydraulic system sticking
5. Plates warped

**Excessive lever pressure**

1. Hydraulic system sticking
2. Lifter mechanism damaged

**Clutch operation feels rough**

1. Outer drum slots rough
2. Sticking piston(s)