



CLUTCH MASTER CYLINDER

DISASSEMBLY


Drain clutch fluid from the hydraulic system. Remove the rear view mirror and clutch lever. Disconnect the clutch switch wires and remove the clutch hose.

CAUTION

Avoid spilling clutch fluid on painted surfaces. Place a rag over the fuel tank whenever the clutch system is serviced.


NOTE

When removing the oil bolt, cover the end of the hose to prevent contamination and secure the hose.

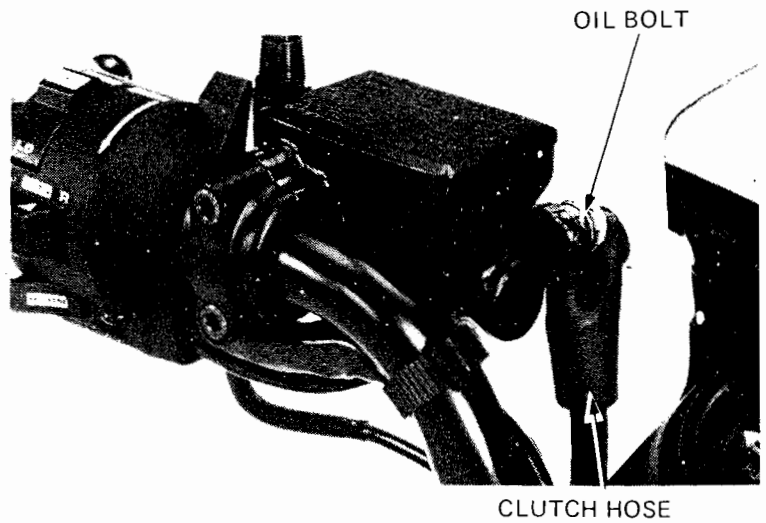

Remove the master cylinder.

Remove the push rod boot and snap ring from the master cylinder body.

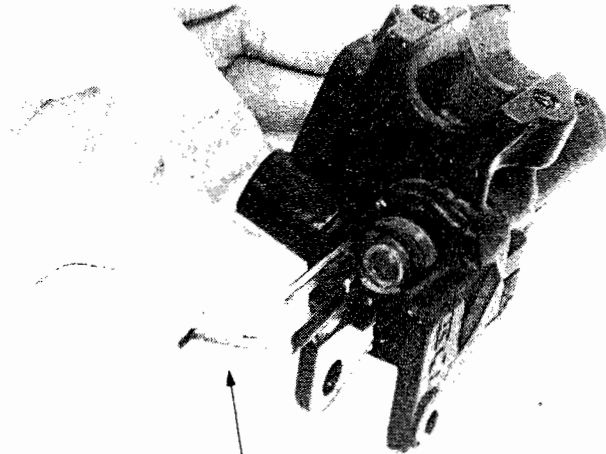

SNAP RING PLIERS
07914-3230001 or EQUIVALENT COMMERCIALY
AVAILABLE IN U.S.A.

Remove the following:

- piston and secondary cup.
- primary cup and spring.
- clutch switch, if necessary.

