




## CLUTCH DISASSEMBLY

**NOTE**

Do not operate the clutch lever after removing the clutch. To do so will cause difficulty in reassembling the clutch.

Drain the engine oil (Page 2-3).  
Remove the right footpeg and brake pedal (Page 15-10).

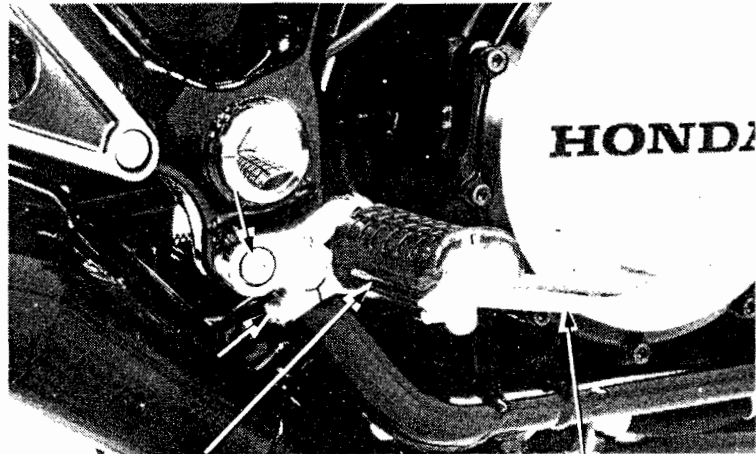


RIGHT FOOTPEG

BRAKE PEDAL

Remove the clutch cover bolts, cover and gasket.

CLUTCH COVER

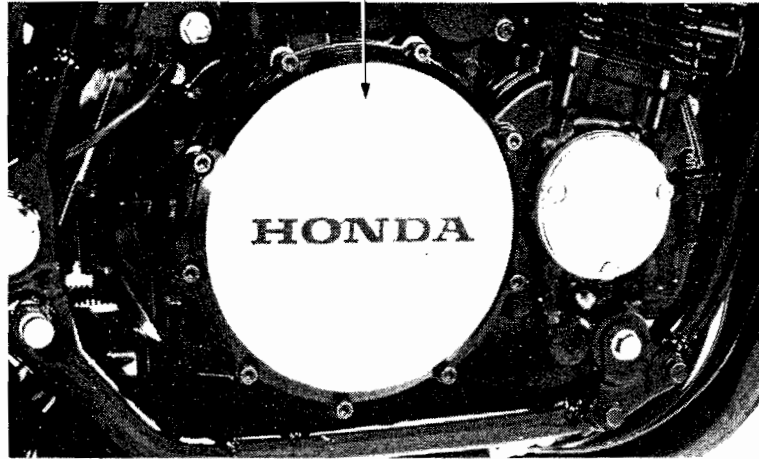

Remove the bolts and clutch springs.

**NOTE**

Loosen the bolts in a crisscross pattern in 2-3 steps.

Remove the clutch pressure plate with the clutch lifter guide and release bearing.

