




CLUTCH

CLUTCH SPRING

Measure the clutch spring free length.

SERVICE LIMIT: 34.0 mm (1.34 in)

Replace any spring that is shorter than the service limit.

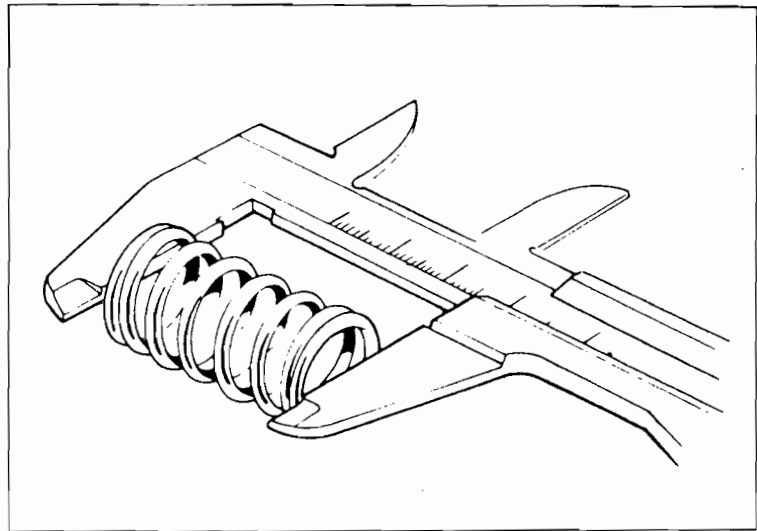


CLUTCH DISC

Replace the clutch discs if they show signs of scoring or discoloration.

Measure the thickness of each disc.

SERVICE LIMIT: 3.1 mm (0.12 in)

Replace any disc that is thinner than the service limit.

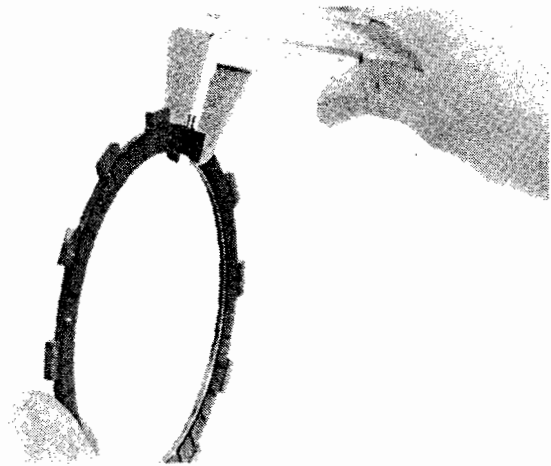

CLUTCH PLATE

Check the plate warpage on a surface plate, using a feeler gauge.

SERVICE LIMIT: 0.30 mm (0.012 in)

