




GEAR POSITION SWITCH

GEARSHIFT PEDAL REMOVAL


Remove the left crankcase rear cover.
Remove the gearshift pedal by removing the pivot bolt and arm pinch bolt.

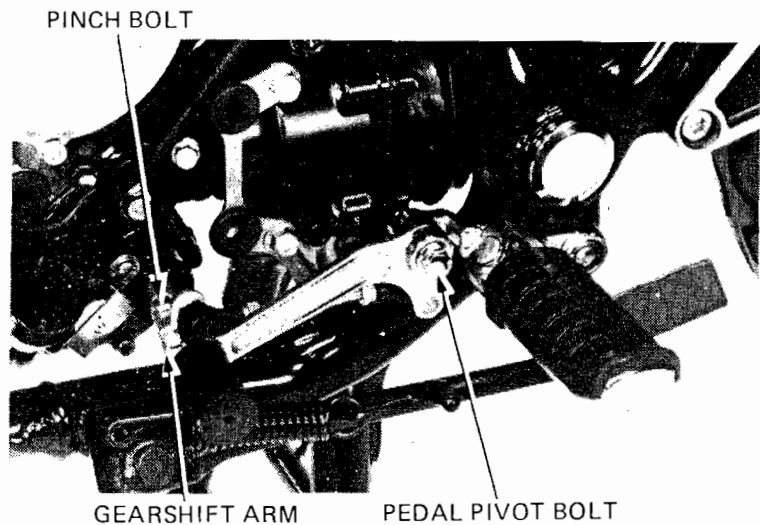

GEAR POSITION SWITCH REMOVAL

Remove the left frame side cover.
Disconnect the gear position switch coupler from the wire harness.
Remove the two switch mounting screws and the switch.

Slip the oil pressure switch cover off the switch.
Remove the oil pressure switch terminal screw and disconnect the switch wire from the switch.

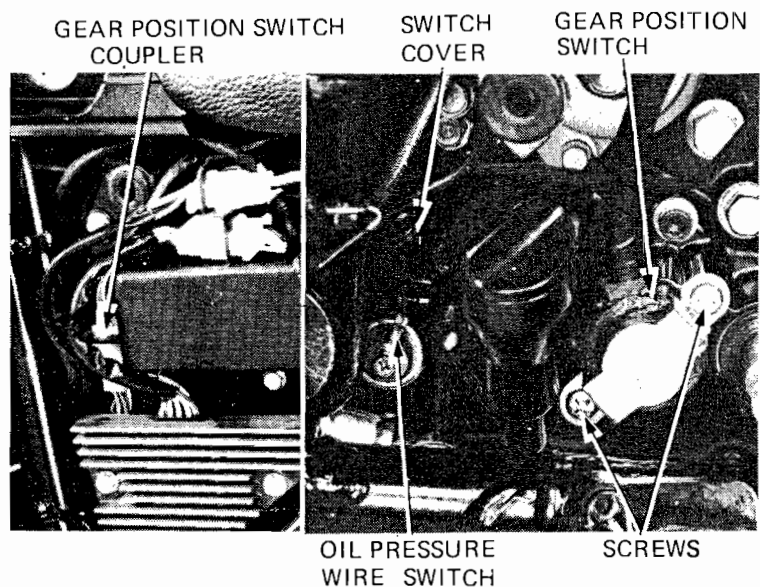

Remove the switch joint.

GEAR POSITION SWITCH INSTALLATION

Align the pin on the switch joint with the groove in the shift drum and install the joint.

