



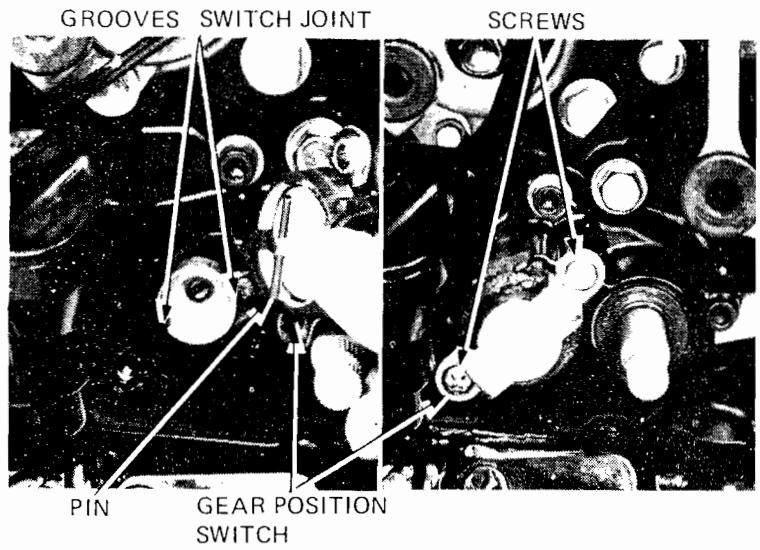

Align the pin on the gear position switch with the grooves in the switch joint and install the switch. Tighten the switch with the two screws securely. Connect the oil pressure switch wire to the switch with the terminal screw and slip the switch cover over the switch.

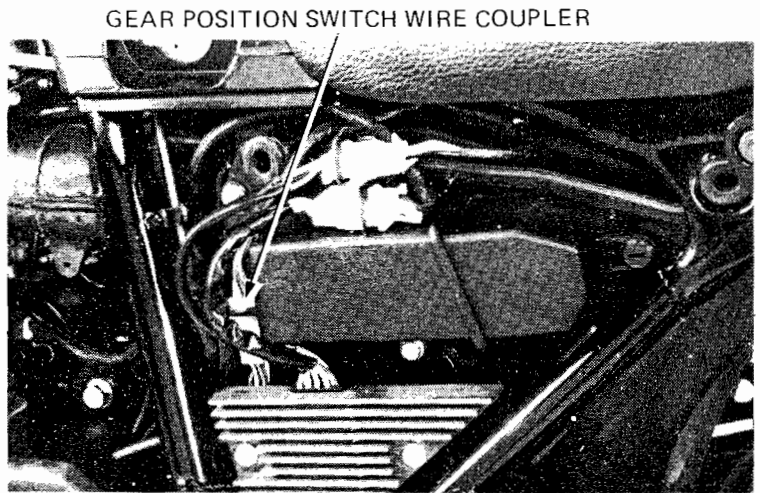

Connect the gear position switch wire coupler to the wire harness. Install the frame left side cover.



GEARSHIFT PEDAL INSTALLATION

Align the index mark on the gearshift arm with the punch mark on the gearshift spindle and install the arm. Tighten the arm pinch bolt.

