

GEARSHIFT LINKAGE




HONDA
CB750SC

Apply grease to the gearshift pedal pivot and install the pedal onto the left footpeg with the pivot bolt.

TORQUE: 30–40 N·m
(3.0–4.0 kg·m, 22–29 ft·lb)

Install the left crankcase rear cover.

Adjust the distance between the ball joints to 47.2 mm (1.86 in) by loosening the lock nuts and turning the shift rod. Tighten the lock nuts securely.

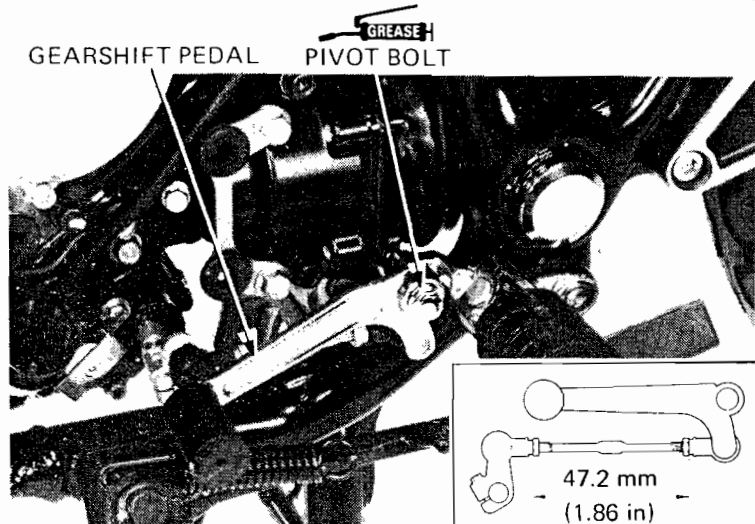


GEARSHIFT LINKAGE

REMOVAL

Remove the engine (Section 5).

Remove the gear position switch (Page 9-2).

Remove the five shift linkage cover bolts and remove the cover.

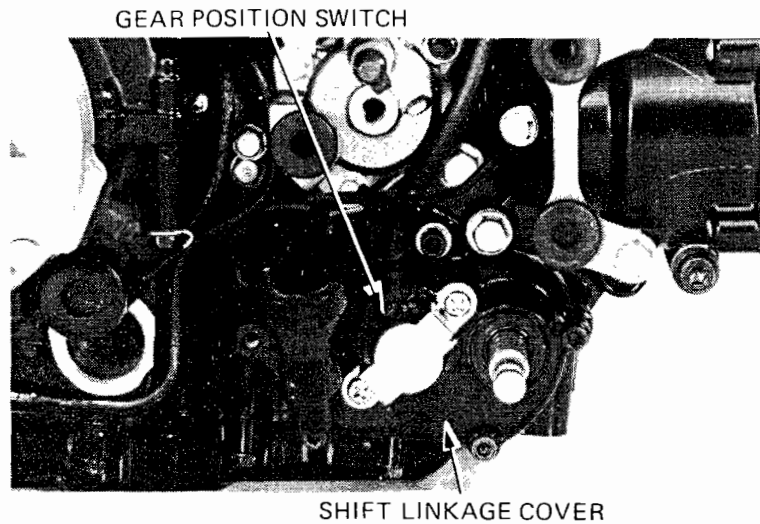

Remove the gasket and dowel pins.
Remove the gearshift spindle.

