



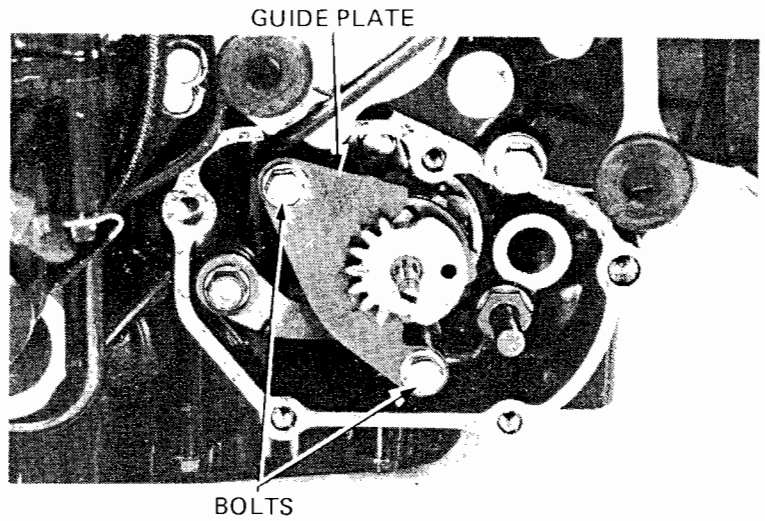

Remove the two guide plate bolts and the guide plate.

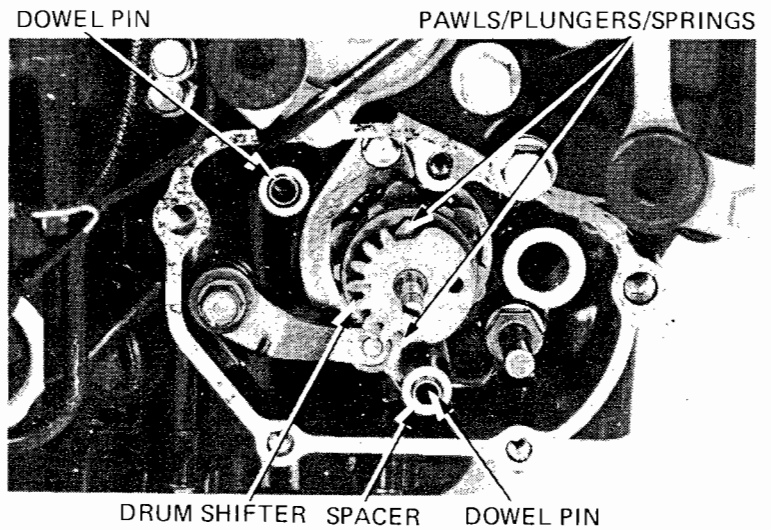

Remove the guide plate spacer and dowel pins. Remove the drum shifter, pawls, plungers and springs.



Remove the drum stopper arm bolt, arm and spring.

