




- Clean the gasket surfaces of the crankcase and shift linkage cover and install the two dowel pins and a new gasket.

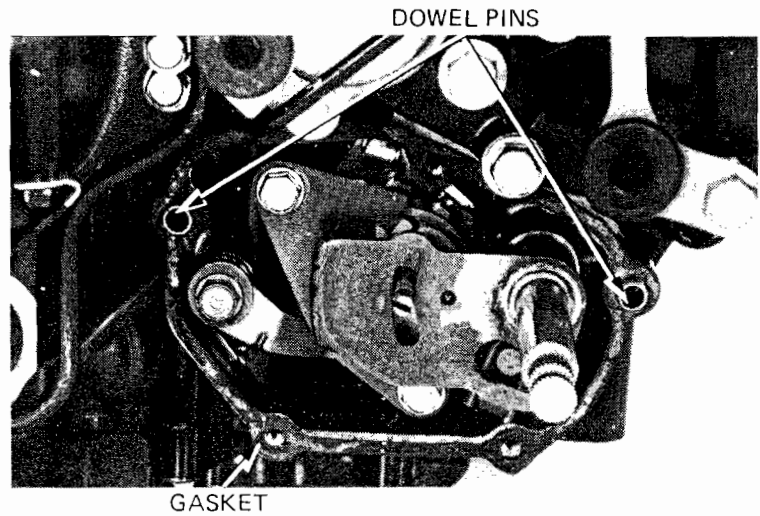

- Install the shift linkage cover with the five socket bolts. Use the copper washer on the socket bolt hole with the "Δ" mark on the cover.
- Temporarily install the gearshift arm and make sure that the shift linkage operates properly.
- Remove the gearshift arm.
- Install the gear position switch (Page 9-2).
- Install the engine into the frame (Page 5-5).
- Install the gearshift pedal (Page 9-3).

