



ASSEMBLY

Mainshaft

Check the gears for freedom of movement or rotation on the shaft.
Check that the snap rings are seated in the grooves and that the snap ring ends are supported by shaft splines.

NOTE

Align the M6 gear bushing oil hole with the mainshaft oil hole.

