



TRANSMISSION

Countershaft

Check the gears for freedom of movement or rotation on the shaft.

Check that the snap rings are seated in the grooves and that the snap ring ends are supported by shaft splines.

NOTE

Align the oil hole of the C3 and C4 gear bushings with the oil hole in the countershaft.

