





OUTPUT DRIVEN GEAR REMOVAL

Remove the output driven gear oil seal from the output gear case.

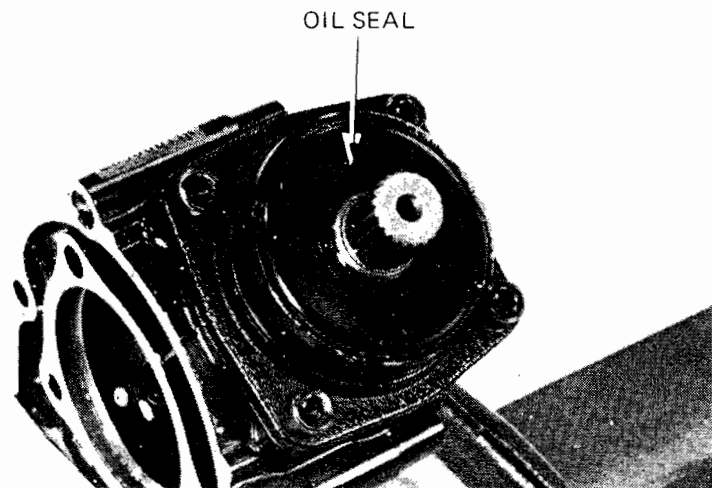

Pry or drill the staked edge of the output driven gear bearing inner race lock nut.

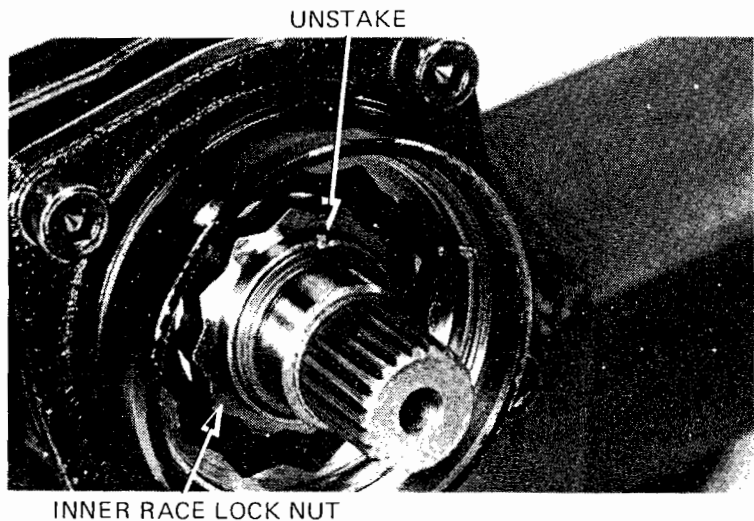

Remove the inner race lock nut and discard it.

LOCK NUT WRENCH, 30/64 mm
07916-MB00000

