





Remove the driven gear bearing holder mounting bolts.

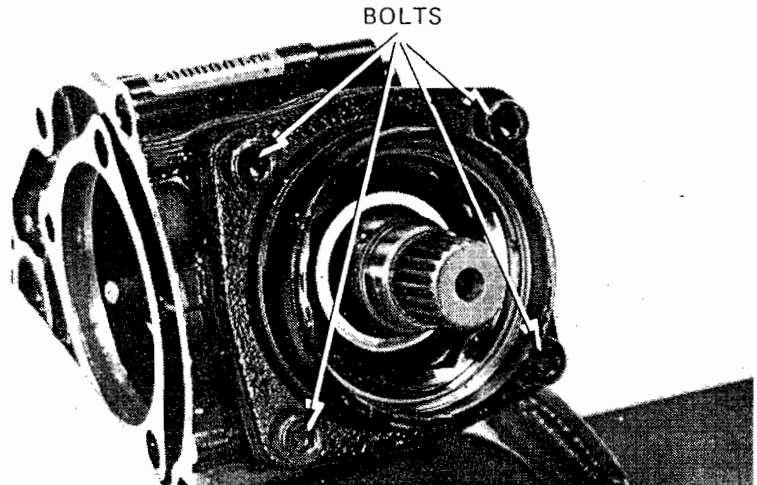

Pry the driven gear from inside the case and remove the driven gear.
Remove the shim and O-ring from the bearing holder.

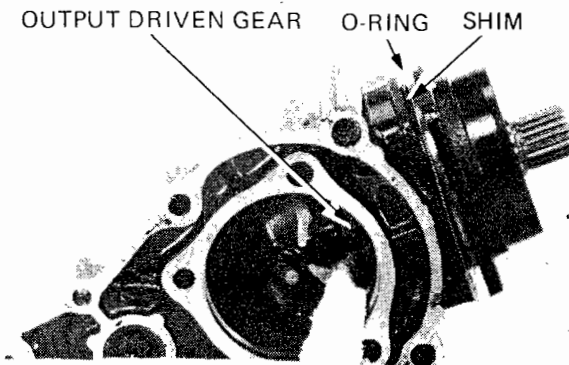

Place the output driven gear/bearing holder in a press.
Press the output driven gear out of the bearing holder.

