




OUTPUT DRIVEN GEAR CASE BEARING REPLACEMENT

Heat the output gear case around the bearing to 80°C (176°F).


CAUTION

Always wear gloves when handling a heated gear case.

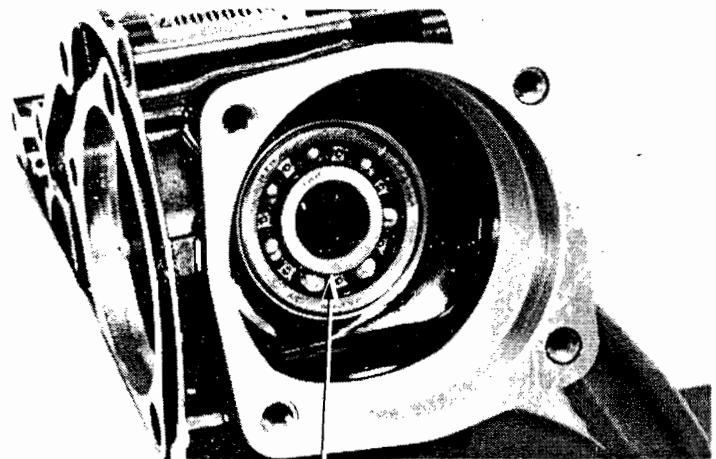

BEARING

Remove the bearing with the special tools.

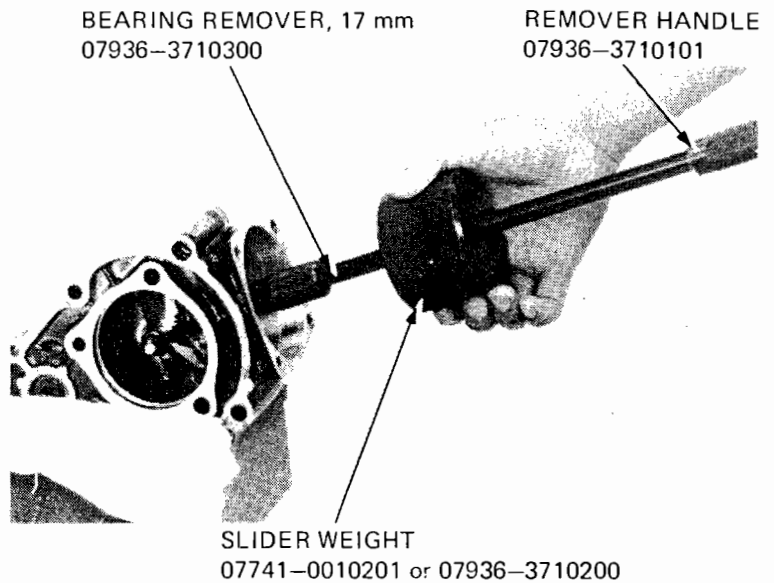


BEARING REMOVER, 17 mm
07936-3710300

REMOVER HANDLE
07936-3710101

SLIDER WEIGHT
07741-0010201 or 07936-3710200

Drive a new bearing into the output gear case.

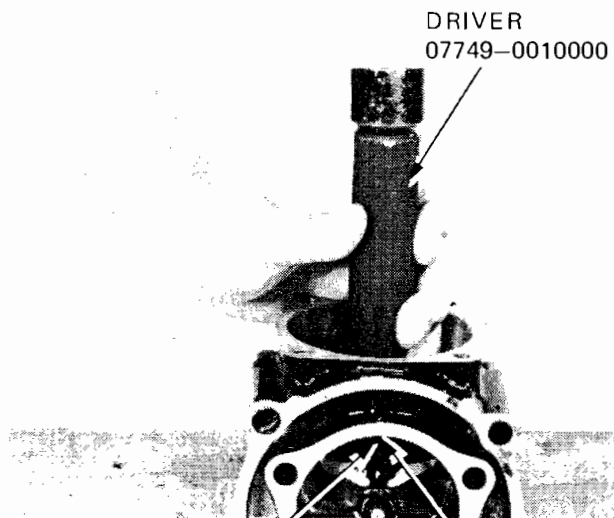

DRIVER
07749-0010000

ATTACHMENT, 42 x 47 mm
07746-0010300

PILOT, 17 mm
07746-0040400