


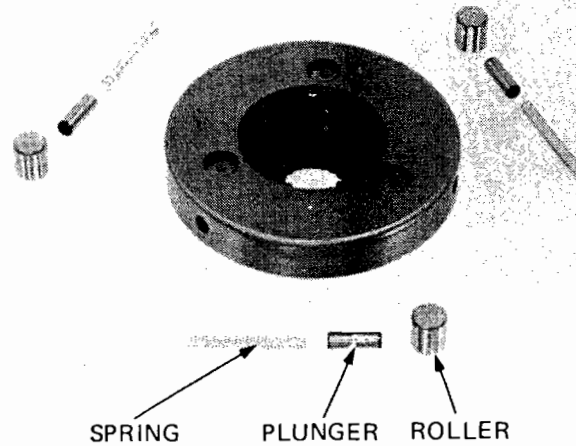


Remove the rollers, plungers and springs from the starter clutch.
Check the rollers, plungers and springs for excessive wear or damage.



**ALTERNATOR SHAFT
DISASSEMBLY/INSPECTION**

Check the alternator driven sprocket and damper cam for excessive or abnormal wear.
Remove the damper cam and damper springs from alternator shaft.

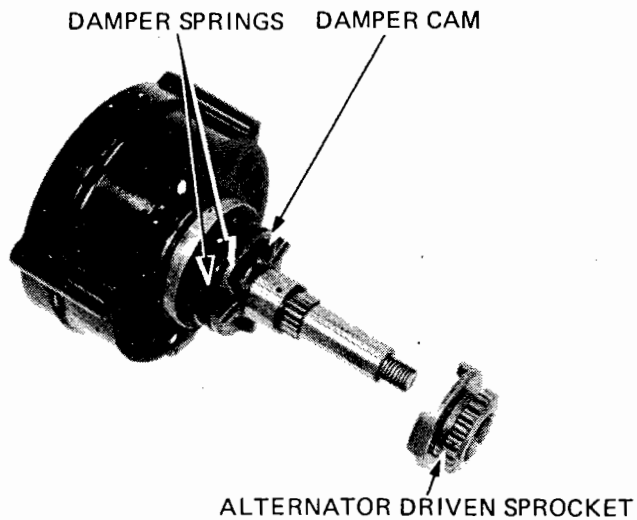

Place the alternator shaft/case in the press so that the case, not the bearing, rests on the press.
Press the alternator shaft/bearing out of the alternator case.

