


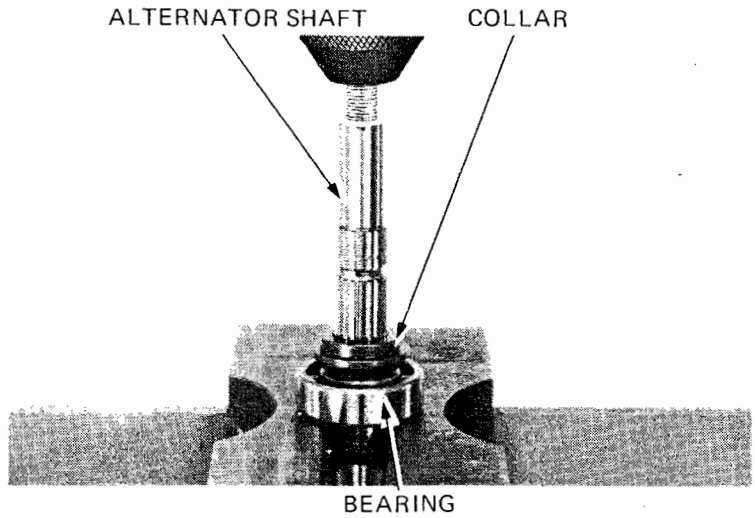


Place the alternator shaft in the press and press the alternator shaft from the bearing and collar.

NOTE

Replace the bearing with a new one if it is removed.



Check the alternator shaft oil seal for wear or damage and replace if necessary.

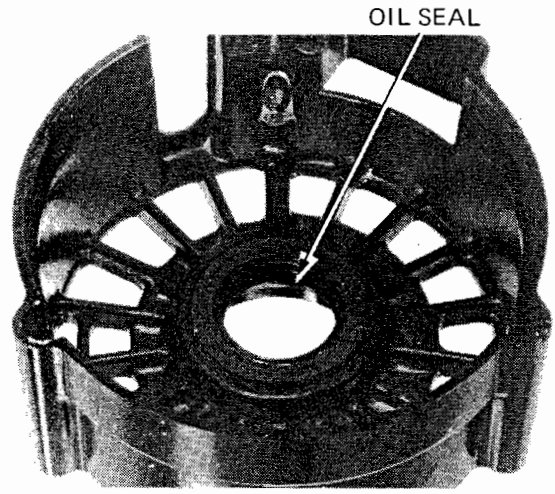

CRANKCASE BEARING REPLACEMENT

Remove the bearing with the special tools shown.

