



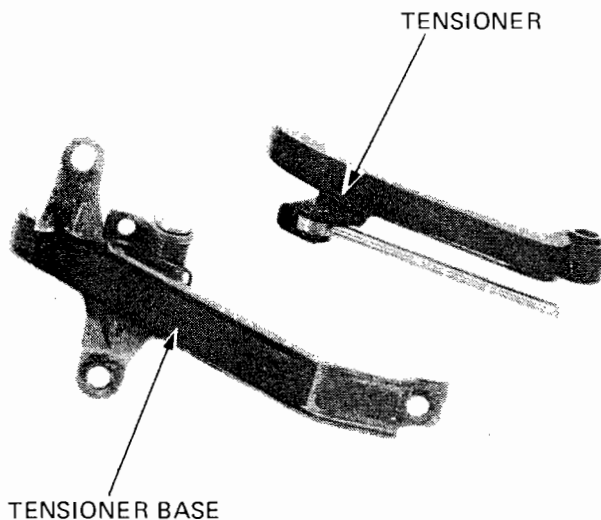

Check the tensioner base and tensioner for excessive wear or damage.

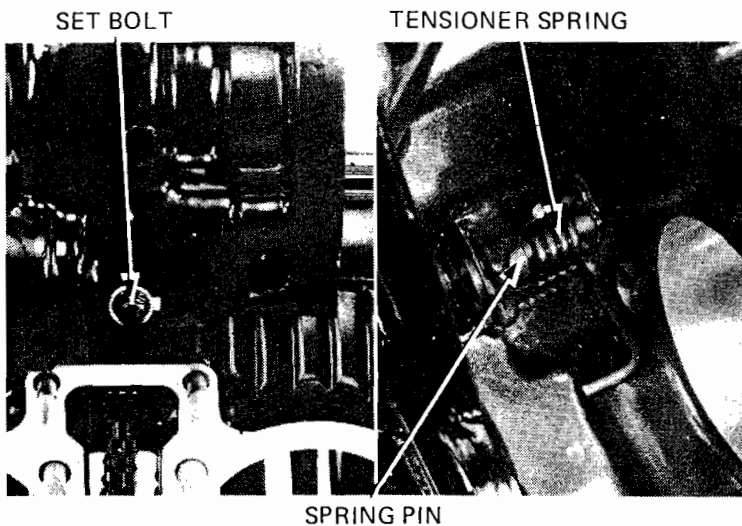

Remove the tensioner spring pin set bolt.
Remove the tensioner spring pin and spring.



ALTERNATOR DRIVE CHAIN TENSIONER ASSEMBLY

Install the tensioner spring and spring pin in the crankcase.
Align the holes in the spring pin and the crankcase and install the set bolt. Tighten the bolt securely.

