




FINAL DRIVE

Remove the spring stop ring and drive shaft from the compressor.

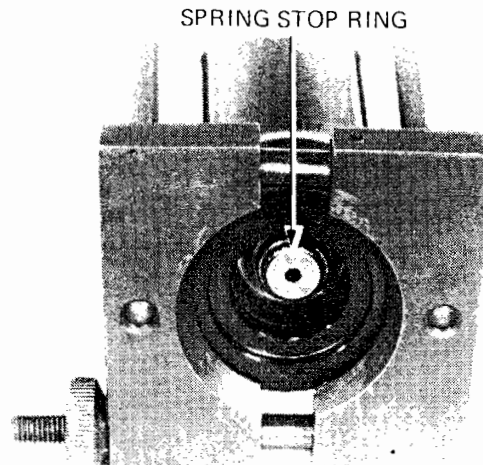


Remove the spring stop, damper cam, damper lifter, damper spring and damper case from the drive shaft.

Check the damper lifter and cam for wear or damage.

NOTE

Install a new stop ring on reassembly.

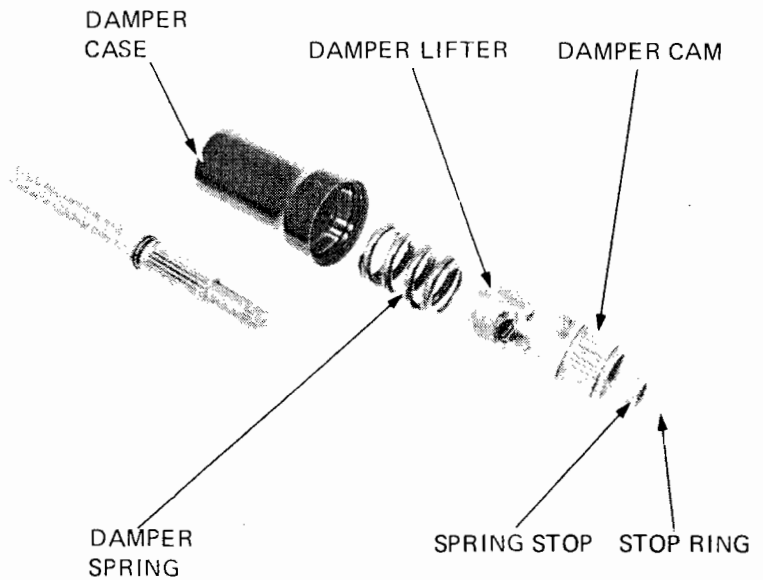

Measure the damper spring free length.

SERVICE LIMIT: 51.5 mm (2.03 in)

