


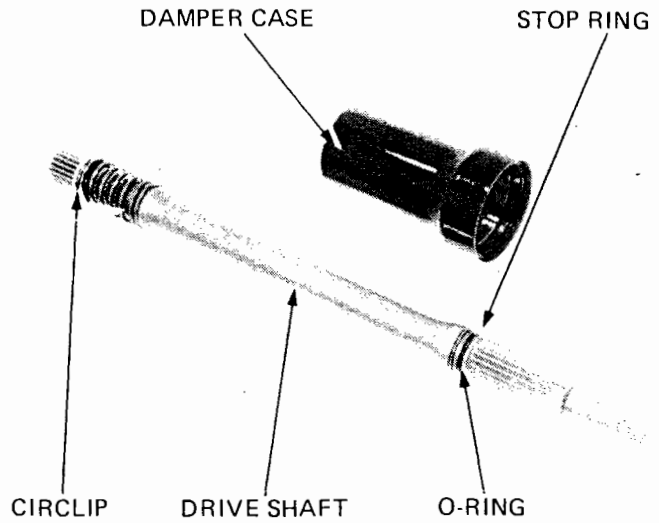

Remove the O-ring and stop ring from the drive shaft.


Remove the circlip, spring seat and spring.



Remove the oil seal and oil seal guide from the damper case.

**NOTE**

Replace the oil seal with a new one if it is removed.

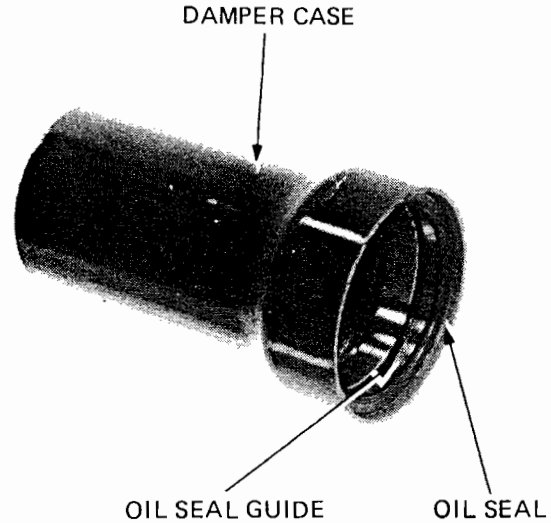

**ASSEMBLY**

Drive the oil seal guide and oil seal in with the driver attachment and driver.

Assemble the remaining parts in the reverse order of disassembly.

**NOTE**

Replace the O-ring, oil seal and stop rings with new ones when reassembling the drive shaft.

