



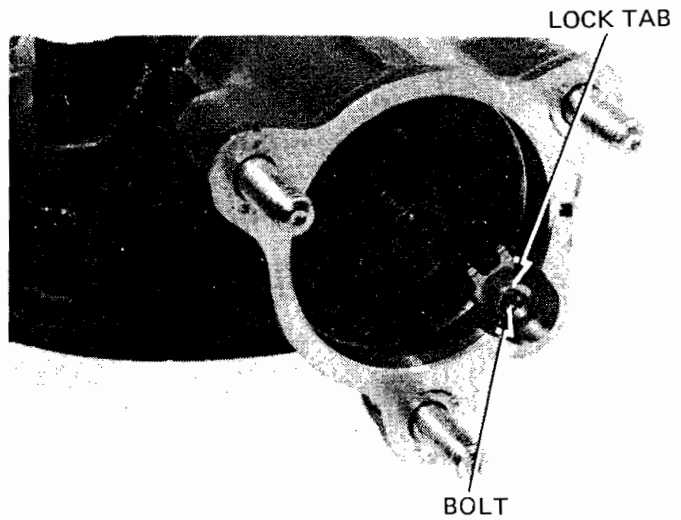

Remove the retainer lock tab.

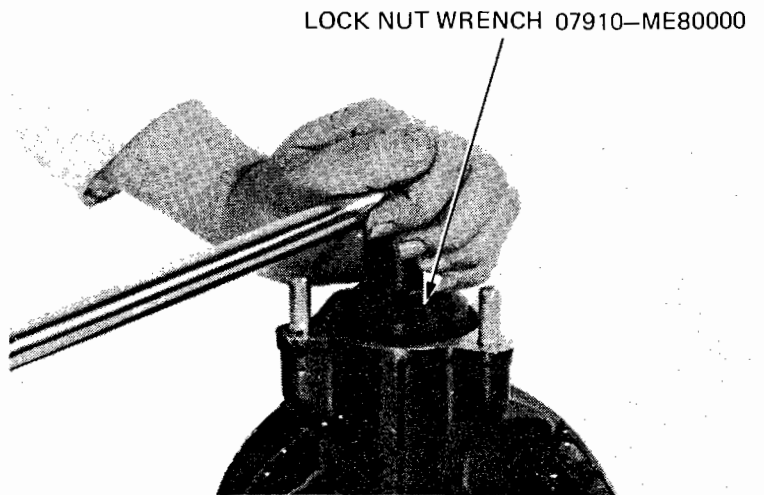

Remove the pinion retainer with the retainer wrench.



Pull the pinion assembly off with the pinion puller.

