


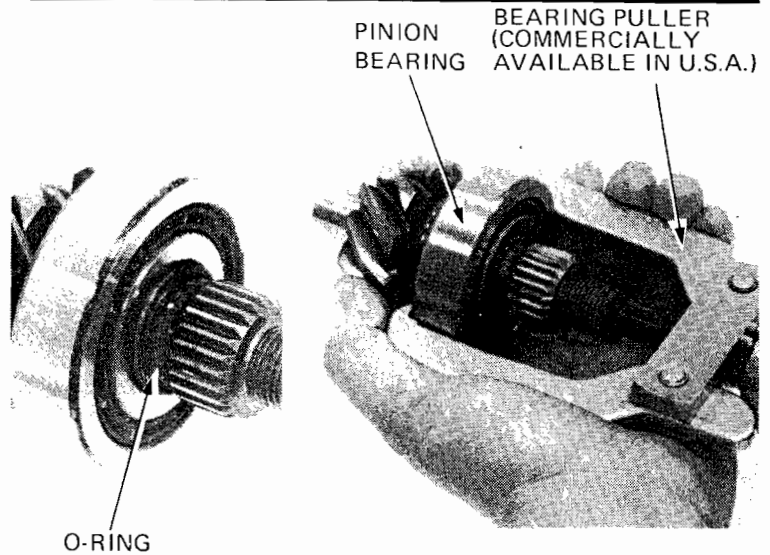

**PINION BEARING REMOVAL**


Remove the O-ring.  
Pull the bearing outer and inner races off with a bearing puller.

Pull the other inner race off with the same tool and remove the pinion adjustment spacer.



**PINION RETAINER OIL SEAL REPLACEMENT**

Remove the O-ring and oil seal from the pinion retainer.

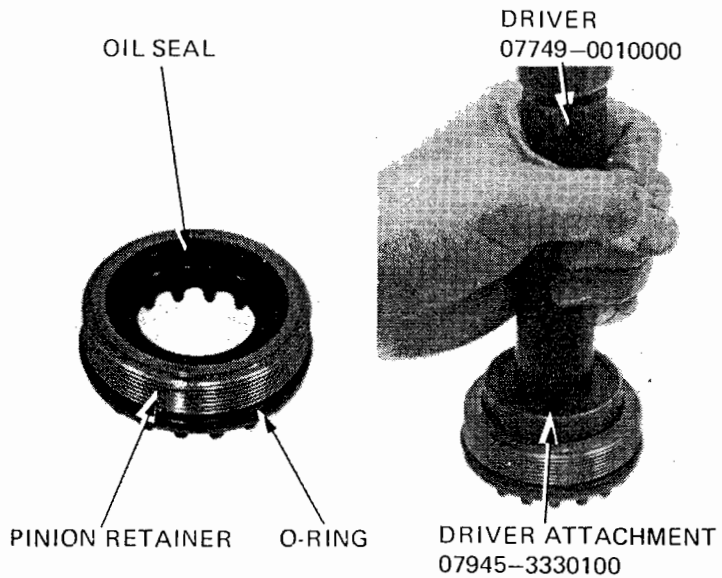

Drive a new oil seal into the retainer.

Coat a new O-ring with oil and install it onto the retainer.

