




FINAL DRIVE


Keep the damper case vertical and install the final drive gear case over the damper cam.

NOTE

- Be careful not to damage the drive shaft oil seal.
- Do not let the gear case separate from the damper case or the oil will spill out.

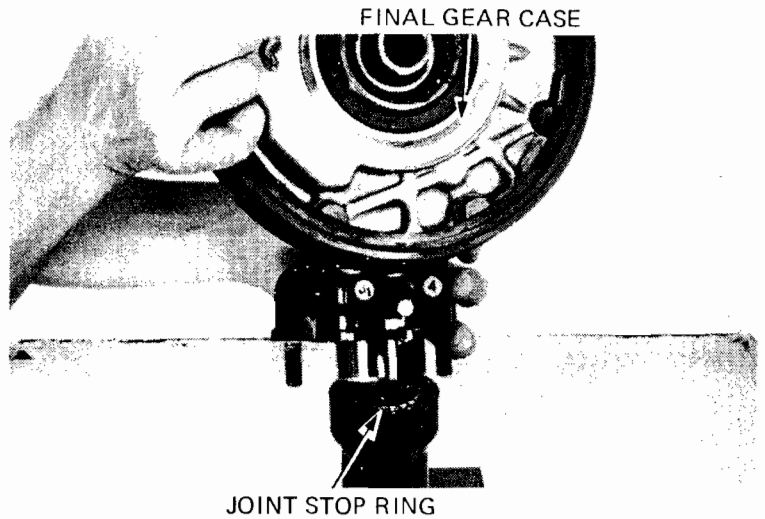

Apply molybdenum disulfide grease to the drive shaft splines.

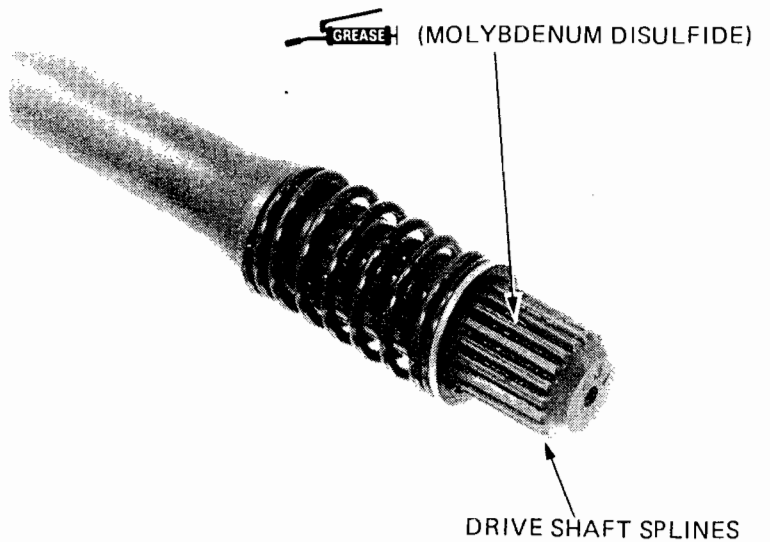

Insert the drive shaft assembly into the swing arm and align its splines with the universal joint.

Attach the gear case onto the swing arm loosely.

NOTE

- To ease axle installation, do not tighten the gear case nuts until after the axle is installed.

