




Tighten the forward switch housing screw first, then the rear screw.
Connect the clutch switch wires.

WARNING

Check to be sure that the wires, hoses and cables are not kinked or pulled taut, and are free to move in all steering positions.

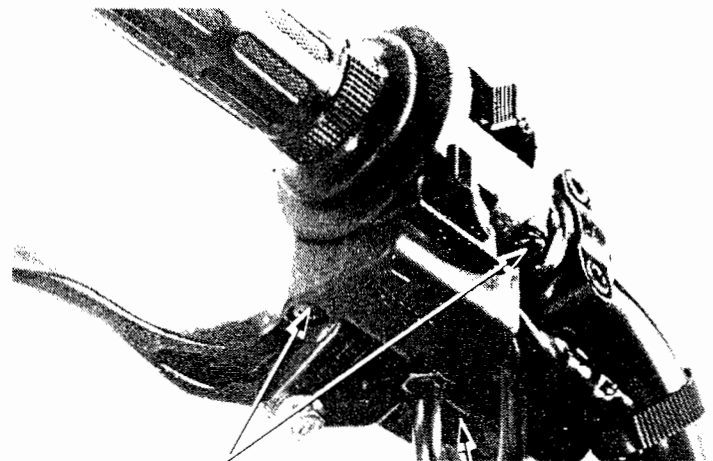


SCREWS

CLUTCH SWITCH WIRES

FRONT WHEEL

REMOVAL

Remove the speedometer cable set screw and the speedometer cable.

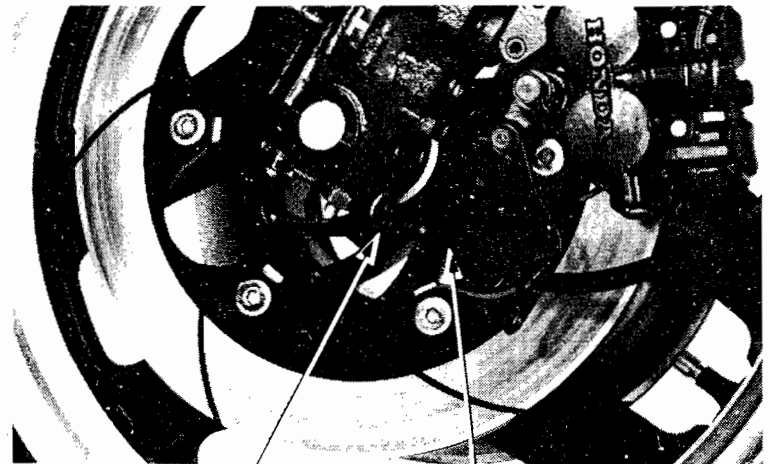

SET SCREW

SPEEDOMETER CABLE

Remove the right caliper assembly by removing the two bolts.


NOTE

Do not operate the front brake lever after removing the front wheel. To do so will cause difficulty in fitting the brake disc between the brake pads.

Remove the right and left axle holders.

Jack up the engine until the forks clear the front axle and remove the front wheel.

RIGHT CALIPER ASSEMBLY

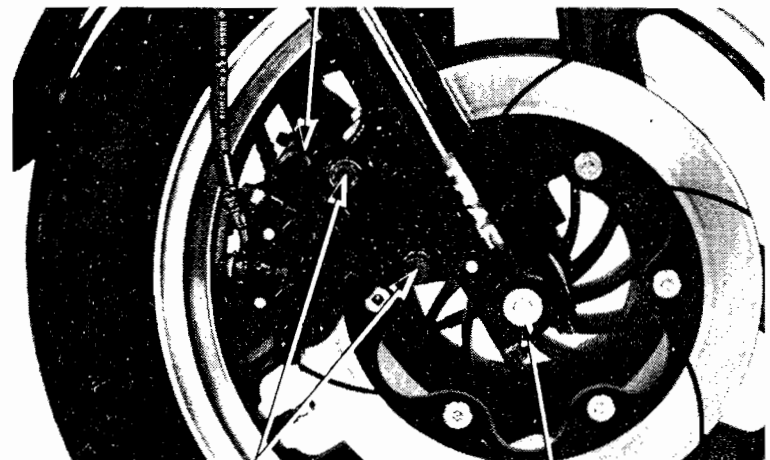

BOLTS

AXLE HOLDER