





Remove the speedometer gearbox and axle side collar.

Remove the brake disc mounting bolts and discs.

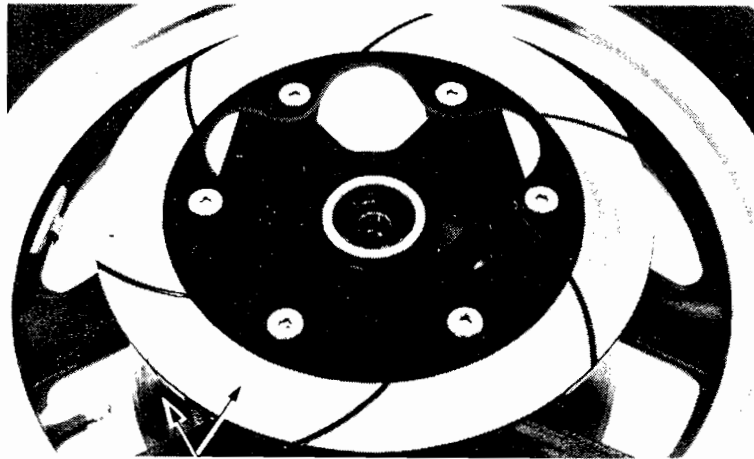

BRAKE DISCS

Remove the right and left seals and speedometer gear retainer from the hub.

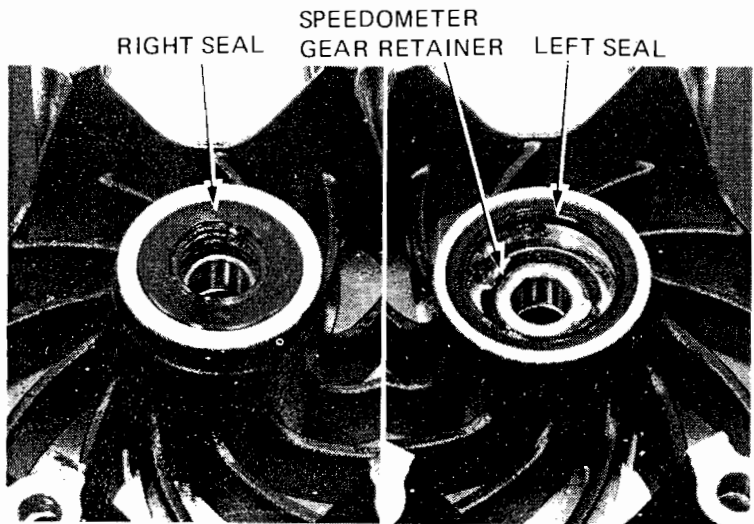


Remove the wheel bearings and distance collar from the hub.

NOTE

If the bearings are removed, they must be replaced with new ones.

BEARING REMOVER EXPANDER
07746-0050100

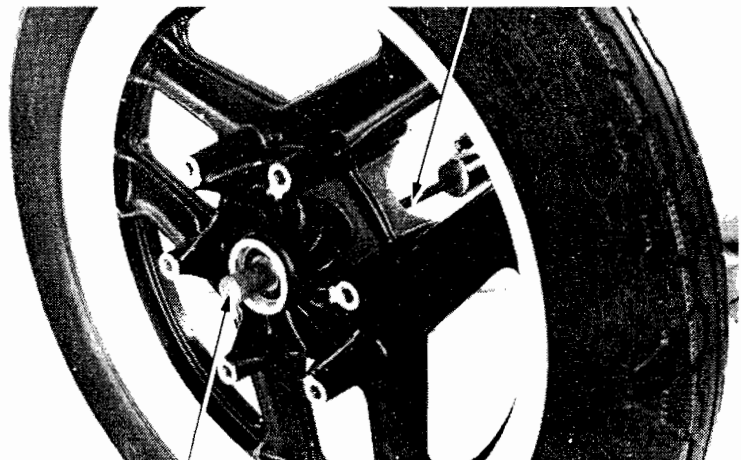

BEARING REMOVER COLLET, 15 mm
07746-0050400