


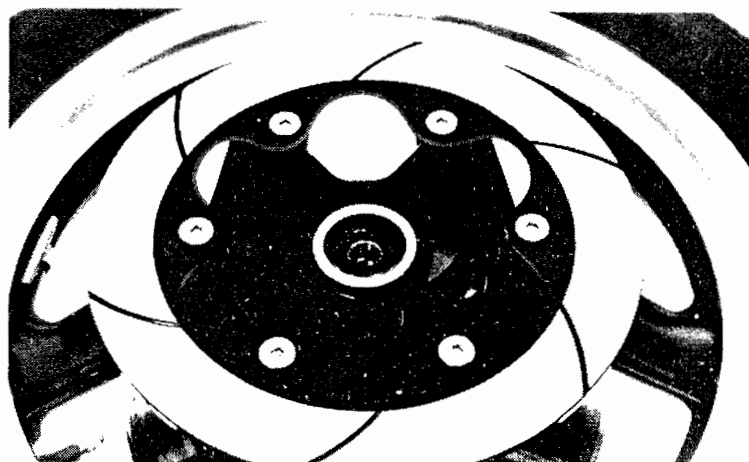

Apply oil or grease to the brake disc bolt threads. Install the brake disc with the "R" mark on the right and the disc with the "L" mark on the left.

TORQUE: 35–40 N·m
(3.5–4.0 kg-m, 25–29 ft-lb)



Fill the speedometer gearbox with grease and install the plain washer and drive gear.

Install the speedometer gearbox in the wheel hub, aligning the tangs with the slots.



Install the front axle and axle nut.

TORQUE: 65–75 N·m
(6.5–7.5 kg-m, 48–54 ft-lb)

Clean the brake discs with a high quality degreasing agent.

